 


INTELLIGENT KEY FINDER WATER-DROP TYPE


[Searching for
remote controller,
key, purse ...]

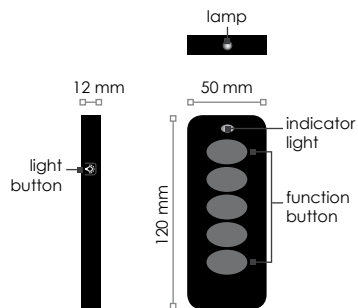

transmitter indicating diagram



receiver indicator diagram

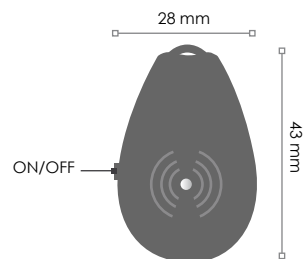

USING PROCESSES



1. Open battery cover of remote controller, put battery into case.



2. Open switch on receiver.



3. Matching (Please click the responding button on transmitter at the same time, when turn on switch on the receiver and heard «di di di di» sound, It means matching successfully when heard «di di» sound from the receiver)



4. Searching (press button on the transmitter, you will heard «di di di» sound from the corresponding receiver)

HOW TO USE

1. matching

Firstly turn up the receiver's switch to 'ON' position, it will beep constantly («di ... di...»), and then press corresponding button on the transmitter, so receiver will stop beeping when it match. The same way as other receivers to match with the device. Please turn off receiver if don't match successfully for the first time. Then re-turn on receiver and re-matching the device.

If you want to match many receivers with the same switch on the transmitter, please turn on all receivers you need to match, then press the corresponding switch on the transmitter.

2. searching

When you want to find the lost keys/bags/luggage/pet and other things, just press the matching button on the transmitter. The corresponding receiver will sound alarm; it will last for 7-9 seconds and then stop automatically.

3. lighting function

The light will on when press the button on the broadside, and off when press again.

SPECIFICATIONS

Operating Distance: 10m-30m (according to the wireless signal)

Receiver Battery: CR2032 x 1 (3V)

Standby power: 0.5 mA

Working power: 4.2 mA

Working time: 12 months

ATTENTIONS

Please change new battery for transmitter and receivers when the searching distance becomes shorter.

The device will be in standby mode when transmitter match with receives, you don't need to turn off the device. Please re-matching the device when turn off the device.

MISE EN ROUTE



1. Ouvrir la trappe à piles de la télécommande et insérer la pile (fournie).



2. Placer le bouton du badge alarme sur ON.



3. Appairage (Appuyer sur le bouton correspondant à la même couleur que le badge que vous avez allumé. Le son du badge passe de « di di di di » à « didi-didi »)



4. Recherche (Appuyer sur la couleur du badge recherché. Vous entendez l'alarme se déclencher et vous retrouver vos affaires/ L'alarme sonne durant 5 à 10 secondes.

CARACTÉRISTIQUES

distance de recherche : 10m-30m (en fonction du signal sans fil)

pile badge : CR2032 x 1 (3V)

consommation veille : 0.5 mA

consommation en fonctionnement : 4.2 mA

durée d'utilisation : 12 mois



Hotline assistance technique **FR**

0 892 350 490

Service 0,45 € / min
+ prix appel


horaire hotline, voir sur le site internet
scs-laboutique.com

PORTE CLÉS SIFFLEUR

(Retrouver
vos télécommandes,
clés, sac à main ...)



télécommande

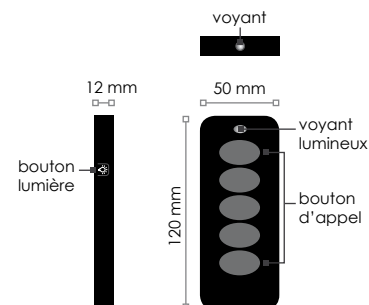

badge alarme

