

scs sentinel

InCam ROTATIVE

Caméra de surveillance rotative extérieure

Outdoor rotative surveillance camera
Camera di sorveglianza rotante esterna
Cámara de vigilancia rotativa exterior
Câmara de vigilância rotativa para exterior



FULL HD

Image Haute
définition
1080p



Détection
de forme
humaine



Suivi de
mouvement
intelligent



REC
Fonction
enregistrement

InCam ROTATIVE

SVI0070

Notice d'utilisation et d'installation Installation and user manual
 Manuale d'installazione e uso Instrucciones de uso e instalación
 Manual de instruções e instalação

V.032025 - IndA

A- SAFETY INSTRUCTIONS

This manual is an important part of your product. These instructions are designed to ensure your safety. Please read them carefully before use and keep them in a safe place for future consultation. The power supply unit must be set up in a dry location. This product must only be used for its intended purpose.

This product works with the iSCS Sentinel app only. The application is available for free on the PlayStore and the AppStore. Application updates may be necessary, for example to fix bugs, improve features, and benefit from a better user experience. You can enable or disable automatic updates for the iSCS Sentinel application in the PlayStore or AppStore settings. The information concerning the reason for the update, its impact on the performance and the evolution of the functionalities of the product or application as well as the storage space used, are indicated, for each update, on the PlayStore or the AppStore.

In accordance with the regulations and the legal guarantee, the application availability and updates are guaranteed for a period of 2 years.


This camera must not be used for street surveillance. The use of this installation must be in compliance with the French law n° 78-17 of January 6, 1978 relating to data processing, files and freedoms. It is up to the buyer to ask the CNIL about the conditions and administrative authorisations required for use outside a strictly personal context. SCS Sentinel cannot be held responsible in case of use of this product outside the laws and regulations in force.




This manual may be amended as the application is updated. To ensure you have the latest version, we recommend you download it from our website www.scs-sentinel.com or from the app iSCS Sentinel : settings / manual.

B- DESCRIPTION

Kit content

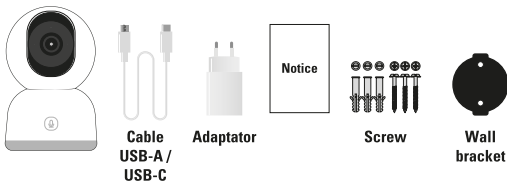


Product presentation

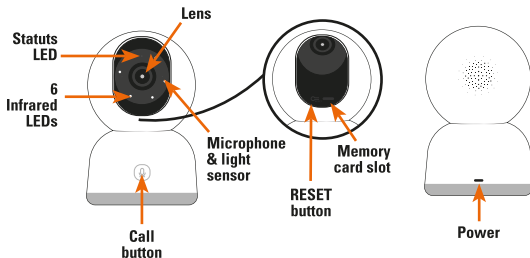


C- INSTALLATION

- 1 - Put your camera in a room near your Wi-Fi router.
- 2- Connect the power supply cable.
- 3- Download the **iSCS Sentinel** free app on your smartphone.

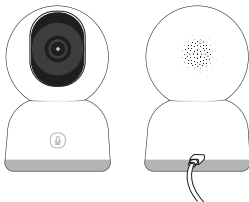

If needed, you can insert a micro SD memory card (Up to 128 Gb) in the camera in order to store video sequences in the camera. **A micro SD card is required to access the video history from the app.**

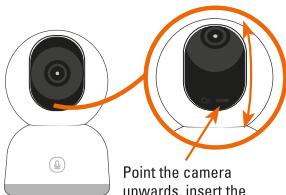

Point the camera upwards, insert the micro SD card here and start the camera.

D- CONFIGURATION

Installing the app



iSCS Sentinel

To download the app, go on to the App Store or Play Store on your smartphone. Search for “iSCS Sentinel”, then click on install.

1.



Once the download is complete, open the app and click on create my account.

2.



Enter your email address and password in the relevant boxes.

3.





Click next.



Please agree to the privacy policy before clicking next.



Enter the validation code you received by email. Then confirm the account.

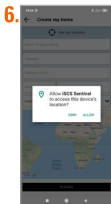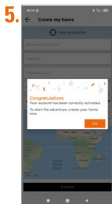

Click on ALLOW.



Enter all the information requested to create your home. Then click on finish.

Adding the camera



Plug in the camera's power cable and place it close to your Wi-Fi router.

Your phone must be connected to the same Wi-Fi network as your camera and its location must be activated.

Wait for the sound signal.



Some materials may reduce the range of the Wi-Fi signal.





Click on **+**, then
"NEW DEVICE" to
add your camera.



Enter your Wi-Fi key and
scan the QR code on
your camera or enter the
code manually.




**Le réseau
doit être en
2.4 GHz pour
fonctionner.**



Meet the 3 steps
and click on «display
the QR code»



Did you hear the
bell ?
No: start again.
Yes: step validated

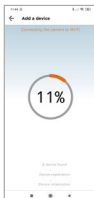

Wait the loading
is over and 3
steps validated.



Add a profile picture
from your camera,
the gallery or select
a picture by default
(product visual or last
motion capture).



If the device fails to connect to Wi-Fi, an error page is displayed.

Troubleshooting



Clicking on "repeat operation" takes you back to the second step.



If "repeat operation" does not work, click on "other method"

Check these five points.



When the red light is flashing, press Next. If the red light is not flashing, press the reset button until you hear a beep.



Connectez le téléphone au point d'accès Wi-Fi de la caméra.




Click on «use AP Pairing»




Settings

1.

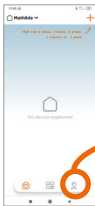

Click on  to go to the app settings.

2.

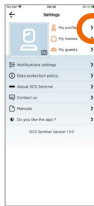

View my profile:
to change
personal
information

To add a home

1.




Click on +

2.




Create a
new home

3.

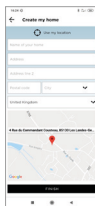



Fill in the fields
and click on
"finish".

To remove a home

1. 

Click on 
2. 

Click on  to remove a home
3. 

To edit a home


1. 

Click on 
2. 

Edit the address
3. 

Notification settings

1.

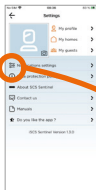

Click on  to go to the notification setting

2.



Click on « enable notification » to activate all notifications.
Otherwise click on the desired notifications.

Using the app

1.



Activate listening

Click to speak



Activate full screen (tilt the phone)

Record the video on your phone.

Take a photo on your phone.

2.



View
what has
happened.



Choose the
date and
the hour of
the event to
watch.

Save
a video

Save
a photo




Click on «change
the date» and on the
required schedule to
view what happened.


3.




Press  to
activate the
joystick

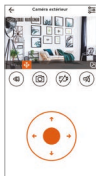

The joystick
allows you to
move the camera
view up and down
and from left to
right.

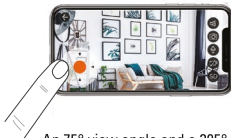

An 75° view angle and a 305°
rotation angle allow you to
reach a 360° view field. To
do this, simply rotate the
camera using the arrows
from the app.

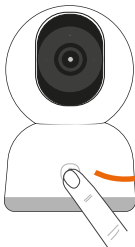

Press the call button to make an instant call.



Press to answer.

4.



Click on  to change the camera settings.



By default, the camera will appear when the app is opened in the favourites list.

Click on  to add/remove the camera from favourites.

5.



Click on
basic function
settings.



Select 'Light indicator' to disable the status LED.

Select 'Motion Tracking' to automatically detect and track moving targets

Select 'Overprint' to display the date and time on the video.

Click on 'Calibration' to have the camera test its horizontal and vertical limit switches and then refocus.

6. Viewing Motion Detection Records



Click on the recording time of the last motion detection

The time will not display if no motion is detected



Click on the video to watch the last motion detection



Click on "motion detection" to program motion detection.

Press «Sensitivity» to manage the motion sensor. Higher is the «sensitivity», the more the camera will detect a motion.



Select "Alarm" if you want to be notified of any movement.



Click on "Program"



Click on +



Select the desired days and time periods for motion detection, then "CONFIRM"




Your program has been added.

SD card settings (if there is an SD card installed in your camera)



Click on "SD card" to access the settings.

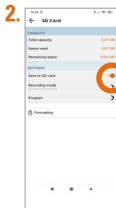


Click on "Record on SD micro card" to automatically save photos and videos on your camera's SD micro card.

3.




Click on
"recording mode"

Press
«Formatting»
to reset your
micro SD card.

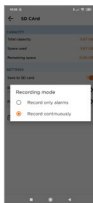

Then choose
whether to record
only alarms or
continuously.

4.

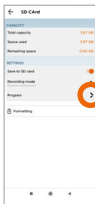

Click on "Program"
to programme
the periods for
recording on the
SD card.



Click on +



Select the
desired days and
time periods for
saving videos/
photos, then
"CONFIRM"



Your program has
been added.

Scenarios

Example:

I activate the motion detector on my camera every weekday at 8 a.m. for 15 minutes.




Then select the device, then motion detection, then desired state: ON

Indicate the desired time between the two actions: 0h 15m 0s

Then select the device, then motion detection, then desired state after the time limit : OFF

 By default, the scenario will appear in the favorites list.



To add guests

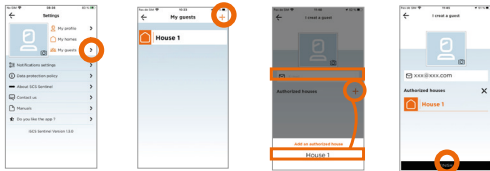

⚠ Via the iSCS Sentinel app, your guest can activate/desactivate the devices but cannot configure them.

Reset

To reset the camera, press & hold the button during 5 seconds. This will remove camera pairing to your Wi-Fi network.

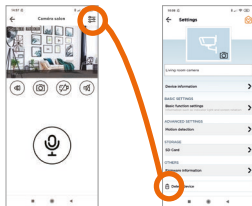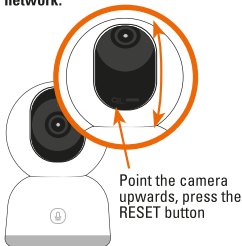

To completely remove the device, you will need to delete it in the app.

E- TECHNICAL SPECIFICATIONS

Camera

Resolution	1080p
Wi-Fi range	30 m free-field range
Compatibility	iOS, Android
Motion detection/Night vision	Yes
Memory card	SD micro from 4 to 128 Go (not supplied)
Video recording	Yes (on SD micro card)
Horizontal view angle	75°
Vertical view angle	45°
Horizontal rotation range	305°
Vertical rotation range	80°
Operating frequency	2412-2472 MHz
Max. transmit power	< 100 mW

Adaptator

Model identifie	JYSY005-0501000E
Input voltage	100-240V AC
Input AC frequency	50/60Hz
Output voltage	5V DC
Output current	1A
Output power	5W
Average active efficiency	75,87%
Efficiency at low load (10%)	71,53%
No-load power consumption	0,046W

F- TECHNICAL ASSISTANCE

Troubleshooting assistance

Problem encountered	Solutions
If adding the camera fails	<ul style="list-style-type: none">- Check that the power supply is connected and that the LED lights up or flashes- Check that your smartphone is connected to Wi-Fi- When typing the Wi-Fi password, do not type spaces or dashes.- The Wi-Fi network name must not contain any special characters.- Check that you have entered the Wi-Fi password correctly.- Check that your box is connected to the Internet.- Make sure you have sufficient bandwidth.- Check that your smartphone is on the same network as the one entered in the application.- Check that the Wi-Fi network you are trying to connect to is 2.4GHz and not 5GHz.- Pair up within 3 m of the Wi-Fi box.- Contact your ISP to check your box settings (UPNP enabled, MAC address filtering disabled, SSID not masked, DHCP enabled, VPN or Proxy disabled).
The camera does not return to its initial position during motion tracking.	<ul style="list-style-type: none">- Please deactivate motion tracking, then return the camera to its initial position and reactivate motion tracking.

Chat en ligne



Une question ?

Pour une réponse personnalisée, utilisez notre chat en ligne sur notre site web **www.scs-sentinel.com**

H- GARANTIE



Keep the barcode in a safe place, along with proof of purchase these will be requested if you need to use the warranty.

It is essential to keep proof of purchase throughout the warranty period.

Not covered by the warranty:

- Material and electrical damage resulting from incorrect installation.
- Damage resulting from improper use (other than for its intended purpose) or modifications.
- Damage resulting from the use and/or installation of parts not included or recommended by SCS Sentinel.
- Damage DUE to a lack of maintenance or impact.
- Damage RESULTING from poor weather, such as hail, lightning or strong winds.
- Returns without a copy of the invoice or proof of purchase.

I- WARNINGS



Don't throw out of order products with the household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collect of garbage proposed by your city.



— — Direct current ~ ~ ~ Alternating current



Indoor use only



Model class II



J- DECLARATION OF CONFORMITY

Hereby, SCS Sentinel declares that this product complies with the essential requirements and other relevant provisions of Directive 2014/53/UE. The UE declaration of conformity may be consulted on the website : www.scs-sentinel.com/downloads.

Toutes les infos sur :
www.scs-sentinel.com



scs sentinel

110, rue Pierre-Gilles de Gennes
49300 Cholet - France