

**KIT EVOLUTIF Sans fil :  
Portier vidéo / CCTV  
Téléphone DECT**

Manuel d'utilisation



**CE**

V.06-2014 / Ind.A



# DÉCLARATION DE GARANTIE

PAR COURRIER

SCS SENTINEL - Service commande  
Rte de St Symphorien - BP 69  
85130 Les Landes g enusson (FRANCE)

PAR INTERNET

[scs-laboulique.com](http://scs-laboulique.com)

N'oubliez pas d'enregistrer votre garantie **dans le mois suivant votre achat**.  
Conservez soigneusement votre justificatif d'achat. (photocopie ticket de caisse ou facture).  
Il vous sera demand  pour faire valoir la garantie.

## VOTRE PRODUIT **GARANTIE 2 ANS**

nom : .....

code barre (num ro   13 chiffres) : .....

N  lot (indiqu  dans la zone du code barre du packaging) : .....

## LIEU D'ACHAT

enseigne : ..... date achat : .....

ville : ..... CP : .....

## VOUS

nom : ..... pr nom : .....

t l. : ..... email : .....

ville : ..... CP : .....

## INSTALLATEUR

particulier  professionnel

soci t  : .....

siret : .....

# Préambule

## ■ Introduction

Nous vous remercions d'avoir acheté notre produit haute qualité.

Lisez attentivement cette notice et suivez toutes les instructions afin de profiter pleinement de toutes les fonctionnalités offertes par votre nouvel appareil.

L'utilisation de ce produit est composée de deux parties : **portier vidéo et caméra de vidéo surveillance** (1ère partie) et **téléphone DECT** (2ème partie)

## ■ Avertissements de sécurité

Afin de réduire le risque de d'électrocution et de blessure, suivez ces avertissements de sécurité avant l'emploi de l'appareil.


1. Lisez attentivement les instructions de ce manuel d'utilisation
2. Respectez les avertissements de sécurité indiqués directement sur l'appareil.
3. Réglez l'heure et la date suite au remplacement des piles
3. Débranchez l'appareil de la prise murale avant nettoyage. Utilisez un chiffon doux et sec pour essuyer. N'utilisez pas de nettoyant liquide ou d'aérosol.
4. Ne placez pas d'objets sur le cordon d'alimentation qui pourraient l'endommager.
5. Ne placez pas la platine de rue et la caméra à proximité de métal.

6. Respectez les symboles de polarité au moment d'insérer les batteries (se référer au chapitre mise en place des batteries).
7. En cas de problème, débranchez l'appareil de la prise et confiez la réparation de l'appareil à du personnel qualifié.
8. Respectez les symboles de polarité au moment d'insérer les batteries (se référer au chapitre mise en place des batteries).
9. Utilisez uniquement **les batteries indiquées dans ce manuel d'utilisation**. N'utilisez jamais de piles ordinaires ou de piles alcalines classiques au risque de provoquer des blessures ou d'endommager l'appareil.
10. N'associez pas des piles neuves avec des piles usées. Les piles usées ne doivent pas être jetées avec les ordures ménagères ou jetées au feu.
11. Si le combiné n'a pas été utilisé pendant une longue période, retirez les piles pour éviter les fuites possibles.
12. Utilisez uniquement l'adaptateur secteur indiqué dans ce manuel d'utilisation.
13. Gardez l'appareil hors de portée des enfants
14. Utilisez l'appareil uniquement de la façon décrite dans ce manuel.
15. Cessez immédiatement l'utilisation de l'appareil si vous constatez des dysfonctionnements.



## ■ Éléments fournis (selon les kits)


Lorsque vous déballez l'appareil pour la première fois, vérifiez que la boîte contient bien tous les éléments illustrés ci-dessous. Si vous constatez qu'une pièce est manquante ou endommagée, contactez sans attendre votre revendeur.

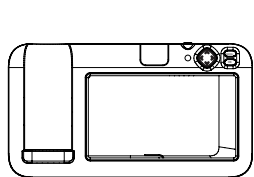


Moniteur  
(Base)



 
Téléphone  
(combiné)



Platine  
de rue

 

Antenne  
(Option)

 

Couvercle  
anti pluie



Caméra



Pied



Antenne  
(Caméra)



Manuel  
d'utilisation



2 batteries  
AAA Ni-MH



Adaptateur\*  
(2)



Cordon\*



Couvercle  
arrière de la  
platine



Vis

\*La forme de la prise varie selon la norme de chaque pays.

# SOMMAIRE

<b>Préambule</b>	<b>1</b>	<b>Mise en place des batteries</b>	<b>14</b>
Introduction	1	Chargement du combiné	15
Avertissements de sécurité	1	Mise sous tension	16
Éléments fournis	3	Vérification du signal vidéo	18
<b>Partie 1: Portier vidéo et caméra de vidéosurveillance</b>			
<b>Avant emploi</b>	<b>4</b>	<b>Fonctionnement</b>	<b>19</b>
Introduction	4	Reconnaissance de la platine	19
Présentation du téléphone	5	Reconnaissance de la camera	20
Description des touches du téléphone	10	Mise en tension /hors tension	21
<b>Instructions d'installation</b>	<b>12</b>	Réception appel	21
Fixation de la caméra	12	Déclenchement ouverture	22
Installation du moniteur	13	Capteur de luminosité	22
Installation de la platine	13	Témoin d'alimentation	22
		Prise de photos et enregistrement	22
		Passez en mode caméra	23
		<b>Description de l'écran</b>	<b>24</b>

# SOMMAIRE

<b>Description du menu</b>	<b>26</b>	<b>Programmation automatique de visionnage</b>	<b>32</b>
En mode menu	26	Information micro carte SD	33
En mode caméra	26	Réinitialisation	33
En mode détection de mouvement	27	Formatage micro carte SD	34
		Version du système	34
<b>Description du menu</b>	<b>28</b>	<b>Liste menu</b>	<b>35</b>
Date et Heure	28		
Volume	28	<b>Descriptif techniques</b>	<b>36</b>
Lecture Vidéo	29		
Lecture Photo	29		
Enregistrement cyclique	30		
Enregistrement moniteur	30		
Enregistrement platine	31		
Mode capture d'image	31		
Réglage luminosité	32		

# SOMMAIRE

## Partie 2: Téléphone DECT

<b>Découverte de l'appareil</b>	<b>39</b>
Fonctions du combiné	39
Fonctions du moniteur	39
Description des touches	41
Icônes de l'écran LCD	43
Branchements du moniteur	44
Mise en place des batteries	44
Chargement du combiné	45
Allumer/éteindre le combiné	46

<b>Fonctions de base</b>	<b>47</b>
Passer un appel	47
Réception d'un appel	48
Fonction secret	49
Réglage du volume	49
Réglage de la sonnerie	50
Rappel du dernier numéro	51
Journal d'appels	53
Verrouillage du clavier	55
Réponse automatique	56
Langue	56
Nom du combiné	57
Bip de portée	57
Recherche du combiné	58
Mode de numérotation	58
Fonction mains libres	59
Signal Flash	59

# SOMMAIRE

<b>Fonctions avancées</b>	<b>60</b>
Navigation dans le menu	60
Options menu	61
Répertoire	62
Réglages de la base	65
Réglages du combiné	67
Réinitialisation	71
Double appel	72
<b>Liste des caractéristiques</b>	<b>73</b>
<b>Guide dépannage</b>	<b>74</b>
<b>Descriptif technique</b>	<b>75</b>

# **1ère partie: portier vidéo et caméra de vidéo surveillance**

## ■ Introduction


- Prend en charge jusqu'à 4 caméras/ou platines extérieures
- Ecran LCD 7" (800x480) QVGA
- Caméra IP54 sans fil 2.4GHz
- Duplex entièrement numérique :  
4 images peuvent être activées et défilées automatiquement
- Caméra avec filtre infra rouge
- 2 modes audio
- Objectif grand angle et LED pour la vision de nuit
- Autonomie de la platine de rue (durée des piles jusqu'à 2 ans ou alimentation avec adaptateur DC 9 ~ 12V)
- Fonctions RTC / téléphone DECT
- Le combiné et l'unité de base peuvent communiquer avec les visiteurs et déclencher l'ouverture de la porte
- Détection de mouvement sur la caméra
- Réglage de la luminosité et du volume de la conversation
- Qualité sonore cristalline jusqu'à 50m à l'intérieur et 200m à l'extérieur
- Contrôle de l'ouverture des portes à distance (en option)
- Enregistrement vidéo avec une microcarte SD (microcarte SD non incluse)
- Platine de rue IP55
- Installation facile

## ■ Présentation du kit


### Moniteur

#### Base

##### Vue de face

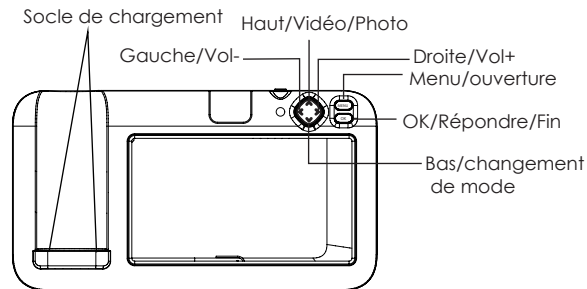



##### Vue arrière

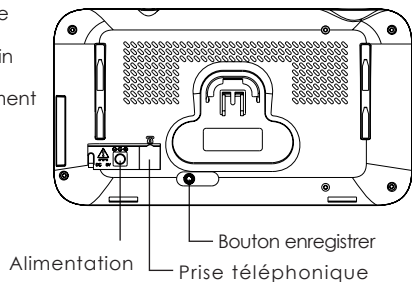





**Vue de côté**

 Emplacement carte micro SD

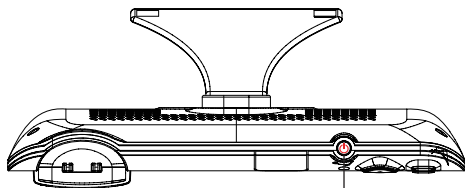**Vue de haut**


Bouton marche/arrêt

# Combiné

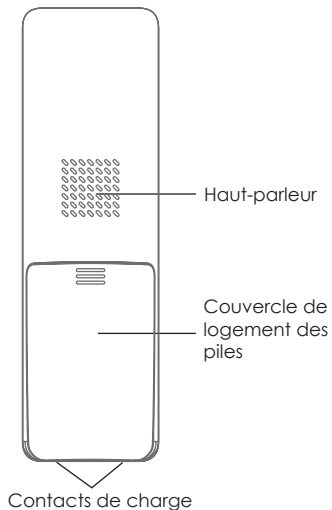
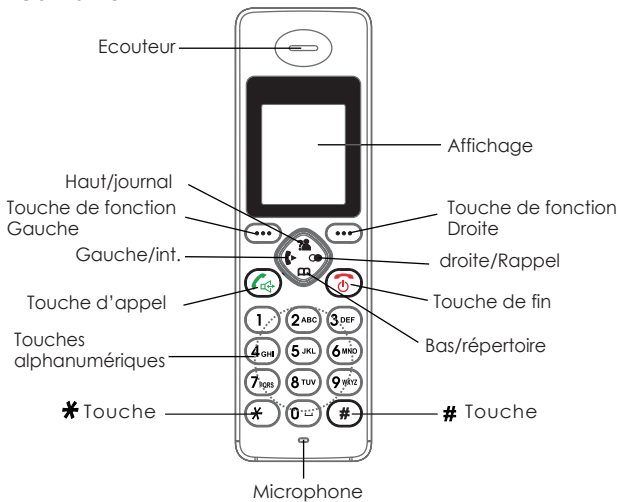


# Caméra


## Vue de face

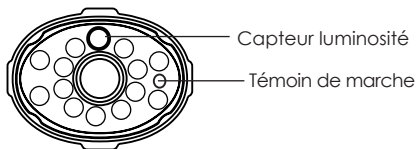

## Vue arrière

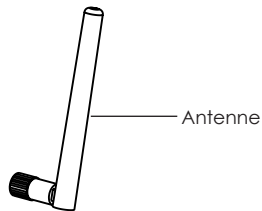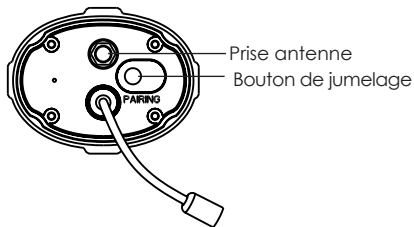

# Platine extérieure

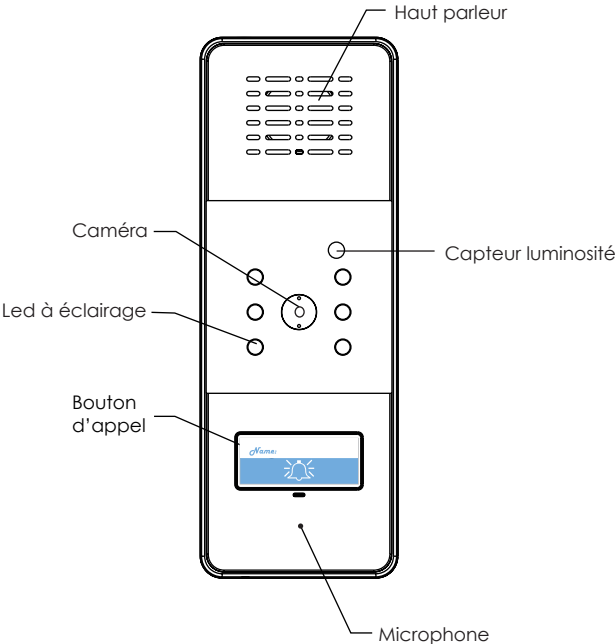

## Description des touches du téléphone



Pour ouvrir la porte à un visiteur



Pour raccrocher



Pour répondre à un appel

## Description des touches de la base



Maintenez appuyé pour mettre en marche ou arrêter la base.  
Lorsque l'interphone sonne, appuyez pour rejeter l'appel.



Appuyez pour sélectionner le mode menu. Appuyez à nouveau pour sélectionner le mode Quad. Lorsque vous êtes en mode menu, appuyez à nouveau pour retourner au précédent menu ou sortir.  
Appuyez pour ouvrir la porte à un visiteur.



En mode menu, appuyez pour confirmer l'opération en cours.  
En mode image, appuyez pour passer en mode caméra (balayage entre cameras, Quad mode, vue d'ensemble).  
Appuyez pour répondre ou raccrocher suite à l'appel d'un visiteur.

## ■ Description des touches de navigation



### **Haut/Vidéo/Photo**

En mode menu, faites défiler la liste des options du menu.

En mode image,

Appuyez pour prendre une photo;

Maintenez appuyer pour enregistrer une vidéo, appuyez à nouveau pour arrêter.



### **Bas/Changement de mode**

En mode menu, faites défiler vers le bas la liste des options du menu.

En mode image, appuyez pour basculer de la caméra n°1 jusqu' à n°4.



### **Gauche/Vol**

En mode menu, parcourez la liste des options du menu.

En mode image, appuyez pour diminuer le volume.




### **Droite/Vol+**

En mode menu, parcourez la liste des options du menu.


En mode image, appuyez pour augmenter le volume.

# Instruction d'installation

## ■ Fixation de la Caméra

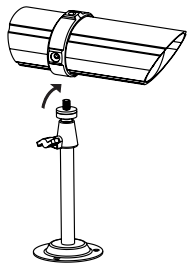


1. Fixez chaque caméra au support à l'aide de la vis de fixation. Vous pouvez fixer le pied au-dessus ou en dessous de la caméra selon le besoin. Serrez plusieurs tours puis orientez la caméra dans la direction souhaitée.

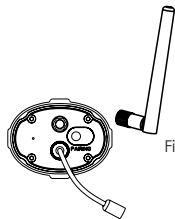

Fixez l'antenne à l'arrière de la caméra.

② Serrez l'écrou pour sécuriser la position.

④ Réglez la pose dans l'angle correct puis serrez le boulon pour verrouiller la position

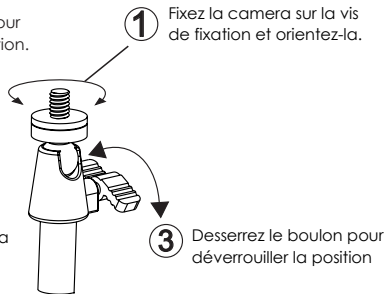

① Fixez la camera sur la vis de fixation et orientez-la.

③ Desserrez le boulon pour déverrouiller la position

### Remarques :


- Privilégiez un champ dégagé pour une meilleure portée entre la caméra et le moniteur.
- Le champ optimal pour la détection de mouvement est de 2 à 8 mètres.
- Précipitations, ondulations de l'eau de la piscine, mouvements des feuilles d'arbre et des arbustes dans le vent peuvent déclencher le système de détection.

# Installation Instruction

## ■ Installation du moniteur


A l'écart des appareils électriques tels que téléviseur, ordinateur ou autre téléphone sans fil.

Dans un endroit haut et central sans interférences telles que les murs, le four à micro-ondes ou le WIFI.

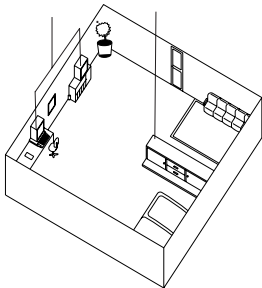

## ■ Installation de la platine

1. Choisissez un endroit adapté pour la platine et prenez en compte la taille moyenne d'un visiteur.
2. Alignez le couvercle anti pluie et les vis avec les trous du mur.
3. Insérez la platine dans le couvercle anti pluie comme illustré dans le schéma n°3
4. Vissez pour fixer et finir l'installation

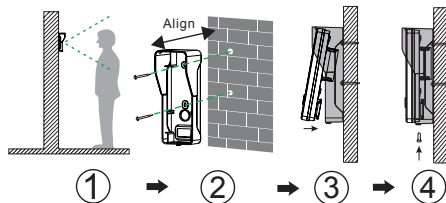





## Mise en place des batteries

### Combiné

Insérez les batteries rechargeables Ni mh (AAA size, 1.2V, 600mAh) fournis avec l'interphone avant son utilisation.

1. Glissez le couvercle du compartiment des batteries dans le sens de la flèche et retirez-le.
2. Insérez les batteries neuves comme indiqué sur le schéma en respectant les polarités (+,-).
3. Remettez le couvercle en place en le faisant glisser jusqu'à son enclenchement

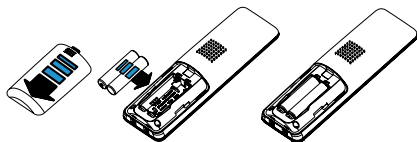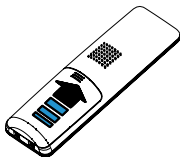

#### Remarques :

- *Inverser le sens peut endommager le combiné.*


#### Remarques :

- *Remplacez les batteries si elles ne récupèrent pas leur capacité après recharge.*
- *Utilisez toujours des batteries rechargeables Ni-MH neuves de qualité. N'utilisez jamais de batteries d'un autre type.*

## Mise sous tension

### Brancher la base


1. Branchez l'extrémité de l'adaptateur secteur à la prise d'alimentation de la base, puis branchez l'adaptateur CA dans une prise murale.
2. Branchez une extrémité du cordon de la ligne téléphonique à la prise de la ligne téléphonique de la base, et l'autre extrémité à une prise téléphonique murale.

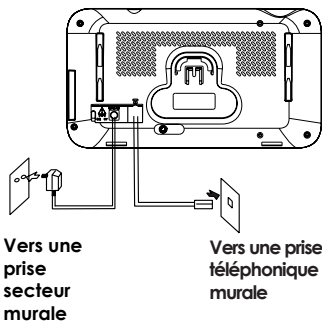

## Chargement du combiné

! Remarque importante: Avant la première utilisation, rechargez totalement le combiné pendant une période minimum de 15 heures.

Pour charger le combiné, il suffit de le poser à l'emplacement prévu sur la base. Vous constaterez que le combiné s'allumera automatiquement.

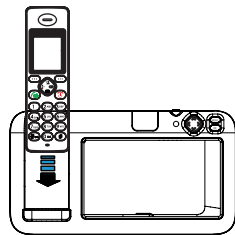


## Brancher la caméra

1. Branchez une des extrémités de l'adaptateur secteur sur la fiche de l'appareil, puis branchez l'adaptateur CA dans une prise secteur murale.


## Mise en place des batteries (suite)

### Platine extérieure

1. Insérez deux piles LR14 1,5V (non fournies) dans le compartiment.
2. Vissez le compartiment

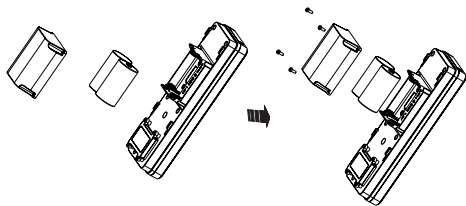

## Branchement de la platine extérieure avec un transformateur d'alimentation 12 V - 1A

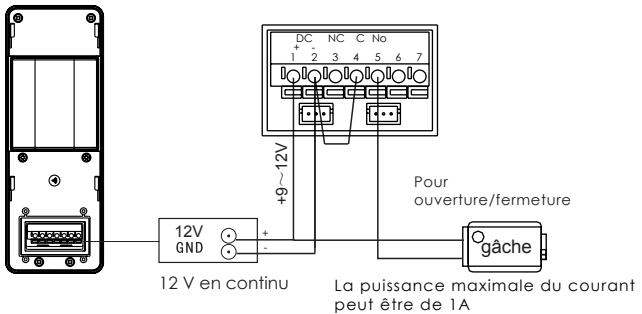




**Remarques :**

- Les deux modes d'alimentation, batteries ou secteur, ne peuvent être utilisés en même temps. Pour activer certaines fonctions spéciales, telles que la surveillance, rétro-éclairage, sur le bouton d'appel et le déverrouillage, branchez un transformateur d'alimentation disponible sur la boutique scs. (scs-laboutique.com)

## ■ Vérification du signal Vidéo





Le Visiophone diffusera sur l'écran la vidéo. Le nombre de barre affiché à côté de l'icône de l'écran indique la puissance du signal reçu

Le tableau ci-dessous indique la signification des icônes. Un seul icône par caméra est visible sur l'écran.

Icône	Signification
	Puissance du signal de faible à fort
	Il n'y a pas de signal provenant de la caméra
	La vidéo diffusée sur l'écran provient de la camera camera1#, 2#, 3#, 4#.


## Fonctionnement

### Reconnaissance de la platine

1. Appuyez  sur la base, puis sélectionnez le menu de la caméra. Appuyez  ou  pour sélectionner la camera de 1 à 4, puis .




 
Appuyez sur le bouton d'appel de la platine, puis maintenez appuyer la touche enregistrement au dos de la platine jusqu'à ce que le témoin led clignote. Une fois que l'écran affiche le nom de l'appareil, l'enregistrement est effectif.

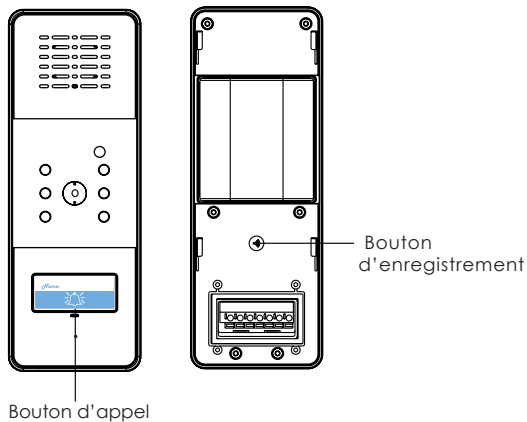Si l'écran affiche « Time out » (temps dépassé), la procédure d'enregistrement a échoué et vous devez recommencer.




# Opérations

## ■ Reconnaissance de la caméra

1. Appuyez  sur la base , puis sélectionnez le menu caméra. Puis appuyez sur  ou  pour sélectionner la caméra de 1 à 4, puis confirmez .

2. Maintenez appuyer pendant 3s le bouton jumelage au dos de la caméra. *Une fois que l'écran affiche le nom du périphérique, l'enregistrement est effectif.*

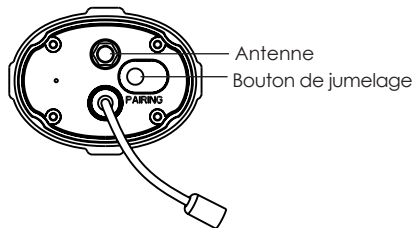

Si l'écran affiche « Time out » (temps dépassé), la procédure d'enregistrement a échoué et vous devez recommencer.

## Fonctionnement






### Mise sous/hors tension

Pour le combiné, appuyez et maintenez 

Pour la base, appuyez et maintenez 

### Réception appel

En mode standby, appuyez le bouton d'appel de la platine. L'interphone sonne et l'image du visiteur apparaît sur l'écran. L'indication "APPEL" apparaît en haut à gauche de l'écran.

1. Si vous ne souhaitez pas répondre, appuyez  pour stopper la sonnerie
2. Sinon appuyez  sur la base ou sur  du combiné. L'interphone cessera de sonner et la conversation pourra commencer.
3. Appuyez  sur la base ou  sur le combiné pour mettre fin à la conversation.

#### Remarque :

- La conversation ne peut excéder 2 minutes. Après ce délai la ligne sera automatiquement coupée.



## Fonctionnement

### ■ Déclenchement ouverture

Pour ouvrir la porte, appuyez  sur la base ou  sur le combiné


### ■ Capteur de luminosité

Lorsqu'un visiteur appuie sur le bouton d'appel de la platine, les capteurs de luminosité s'activent automatiquement si la lumière ambiante devient trop faible.

### ■ Témoin d'alimentation

Quand la caméra est en marche, le témoin s'allume.

### ■ Prise de photos et enregistrement

Appuyez sur  pour prendre des photos

Appuyez et maintenez  pour filmer, appuyez à nouveau sur  pour arrêter.

#### Remarque:

- Pour prendre des photos ou filmer, insérez une microcarte SD
- Vous pouvez enregistrer la vidéo à partir de n'importe quelle caméra.

## Fonctionnement


### ■ Passez en mode caméra

Appuyez sur  Pour sélectionner le mode d'affichage souhaité des caméras sur l'écran

Balayage entre les caméras

Vues partagées (affichage des caméras 1 ou 4 divisé sur l'écran)

Pleine vue (affichage d'une seule caméra en plein écran).


Appuyez sur  pour quitter le mode caméra;



#### Remarque:


 
- Pendant la surveillance appuyez sur  ou  pour régler le volume.

## Description de l'écran

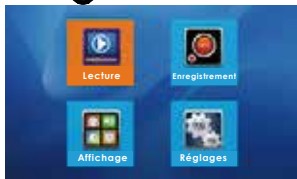En mode standby, appuyez sur  pour sélectionner l'option du menu et confirmez avec 





Option Menu	Sous menu	Fonctions
	Lecture Vidéo	Lit la vidéo enregistrée
	Lecture photo	Affiche les photos enregistrées
	Enregistrement cyclique	Enregistrement par séquence. Vous pouvez l'activer ou désactiver.
	Détection de mouvement	Déclenche l'enregistrement lorsque que quelque chose bouge devant
	Mode surveillance	Enregistre en continu.
	Enregistrement auto platine	Vous pouvez régler l'enregistrement automatique de la platine
	Mode capture photos de la platine	Pour activer le mode de capture photos de la platine


Option menu	Sous menu	Fonction
	Luminosité	Réglage de la luminosité de l'écran
	Volume	Réglage du volume
	Horloge	Réglage de l'heure.
	Temps auto.de visionnage	Pour paramétrer le temps d'affichage en mode balayage
	Information micro SD	Affiche les informations de la carte micro SD
	Liste des caméras	Pour sélectionner la caméra que vous souhaitez visionner.
	Réinitialisation	Pour activer les réglages d'usine
	Formatage micro SD	Formater/effacer les données de la carte micro SD
	Version du système	Affiche les informations du système

## Description du menu

### ■ En mode menu



En mode image, appuyez sur  pour entrer dans le menu.

En mode menu, pressez  pour revenir au menu précédent.

Dans le menu précédent, naviguez avec  pour sélectionner les différentes options.

Pressez  pour entrer dans le menu suivant.





Appuyez sur  ou  pour sélectionner les différentes options, puis  pour confirmer.

Appuyez  ou  pour changer les paramètres de l'option.

### ■ En mode caméra

Appuyez  pour passer au mode caméra (pleine vue, vue partagée, balayage)

#### ● Pleine vue/vue partagée

-  Diminuer le volume.
-  Augmenter le volume .
-  Prise de vue / enregistrement vidéo (si bouton maintenu appuyé)
-  Changement caméra de 1 à 4.



 









#### ● Balayage entre caméras

Désactivation du son et du mode photo et enregistrement.

## Description Menu(Suite)







 



### ■ En mode de détection de mouvement

Lorsque le mode enregistreur est actif, le moniteur enregistre automatiquement lorsque quelque chose bouge devant la caméra.

1. Appuyez sur  pour afficher les options du menu principal.
2. Appuyez  pour choisir  puis .
3. Appuyez  ou  pour choisir sensibilité détection mouvement puis .
4. Appuyez  ou  pour choisir caméra 1#,2#,3#,4#. Avec  ou  réglez le niveau de sensibilité : arrêt /faible /moyen/élevé,
5. Appuyez  pour enregistrer les réglages.

## Description du menu

### ■ Date et heure

 









1. Appuyez  pour afficher le menu principal
2. Puis  pour choisir  puis 
3. Avec  ou  choisissez réglage de l'horloge. Puis  pour valider.
4. Avec  ou  réglez le niveau de volume souhaité.
5. Faites  pour enregistrer les réglages.

#### Remarque:

   - La date et l'heure doivent être réglées pour que l'horloge affichée sur le moniteur soit correcte.  
Lorsque vous remplacez les batteries, réglez à nouveau la date et l'heure.










### ■ Volume

5 niveaux de volume sont programmables pour régler le volume pendant un appel.




 





1. Appuyez  pour afficher le menu principal.
2. Puis  pour choisir , et confirmez avec 
3. Avec  ou  sélectionnez l'option Volume puis  pour valider.
4. Avec  ou , réglez le niveau de volume souhaité.
5. Faites  pour enregistrer les paramètres.

## Description Menu(Suite)
 
### ■ Lecture Vidéo

1.  Pour afficher les options du menu.
2. Avec  sélectionnez , puis .
3. Avec  ou  pour choisir lecture vidéo, puis .
4. Avec  ou  choisissez l'enregistrement que vous souhaitez visionner.

### ■ Lecture Photo

1.  Pour afficher les options du menu
2. Avec  sélectionnez , puis .
2. Avec  ou  pour choisir lecture photo, puis .
4. Avec  ou  sélectionnez la photo que vous souhaitez afficher à l'écran.








#### Remarque :

  - La suppression des photos ou de la vidéo se fait uniquement, soit par réinitialisation ou soit par le formatage de la carte micro SD.










 


## Description du menu (suite)

### ■ Enregistrement cyclique

1.  Pour afficher le menu principal.
2. Avec  sélectionnez  puis .
3. Faites  pour choisir enregistrement cyclique puis avec  or  sélectionnez Oui ou Non pour activer ou désactiver la fonction.

### ■ Enregistrement moniteur

1.  Pour afficher les options du menu
2. Avec  sélectionnez  puis .
3. Avec  ou  choisissez mode enregistrement moniteur, puis .
4. Avec  ou  sélectionnez la durée d'enregistrement souhaitée: 10, 30 ou 60 secondes.
5. Puis  pour sauvegarder les paramètres.




 
## Description Menu (Suite)

### ■ Enregistrement platine

1. Avec  Pour afficher les options du menu.
2. Avec  sélectionnez , puis .
3. Avec  ou  sélectionnez **enregistrement platine**, puis .
3. Avec  ou  sélectionnez le mode capture, puis .
4. Avec  ou  sélectionnez le mode de capture: 1, 3, ou 5 photos
5. Faites  pour sauvegarder les paramètres

### ■ Mode capture d'image










Lorsque le visiteur appuie sur le bouton d'appel de la platine, la caméra prend automatiquement une photo.

1. Avec  pour afficher les options du menu.
2. Avec  sélectionnez , puis .

## Description Menu(Suite)











### ■ Réglage luminosité

5 niveaux de luminosité de l'écran sont réglables.

1. Faites  pour afficher les options du menu.
2. Sélectionnez  puis validez avec .
3. Avec  ou  sélectionnez réglage luminosité puis .
4. Avec  ou  sélectionnez le niveau de luminosité souhaité.
5. Puis  pour sauvegarder les réglages.








### ■ Programmation automatique de visionnage

Vous pouvez de façon automatique alterner le visionnage des caméras 1 à 4. Cette fonction vous permet de programmer la durée de visionnage souhaitée pour chaque caméra.

1. Faites  pour afficher les options du menu.
2. Avec  sélectionnez  puis .
3. Avec  ou  choisissez programmation automatique de visionnage puis .
4. Avec  ou  programmez la durée de visionnage souhaitée: 5 secondes, 10 secondes, 30 secondes ou 60 secondes.
5. Puis  pour sauvegarder les réglages




 





## Description du menu(Option)

### ■ Information micro carte SD

1.  pour afficher les options du menu.
2. Avec  sélectionnez , puis .
3. Avec  ou  sélectionnez **Information SD**, puis  pour consulter les informations de la carte
 
### ■ Réinitialisation

Cette fonction vous permet de réinitialiser l'appareil avec les réglages d'usine.

1.  pour afficher les options
  2. Avec  sélectionnez , puis .
  3. Avec  ou  sélectionnez réinitialisation, puis .
- . Avec les touches  ou  sélectionnez Oui ou Non pour activer ou non la fonction.  
Si vous l'activez, les réglages d'usine s'appliqueront par défaut.











#### Remarque :

- si vous réinitialisez le téléphone, le réglage usine reviendra par défaut.

## Description du menu (suite)

### ■ Formatage carte micro SD







 
Cette fonction permet d'effacer les données de la carte.

1. Tapez  pour afficher les options du menu
2. Avec  sélectionnez  puis 
3. Avec  ou  sélectionnez formatage SD, puis . Naviguez avec  ou  pour sélectionner Non ou Oui pour activer ou désactiver la fonction.
4. Puis  pour sauvegarder les réglages.

#### Note :

- Le téléphone prend en charge une microcarte SD jusqu'à 32 GB.

### ■ Version du système

1.  pour afficher les options du menu
2. Avec  sélectionnez  puis 
3. Avec  ou  sélectionnez version du système, puis  pour consulter les informations du système.

# Liste du menu

## 1. Lecture

- Lecture vidéo
- Lecture photo

## 2. Enregistrement

- Enregistrement cyclique
- Détection de mouvement
- Enregistrement moniteur
- Enregistrement platine
- Mode capture

## 3. Affichage

- Réglage luminosité
- Réglage Volume
- Réglage date et heure
- Temps automatique de visionnage

## 4. Système

- Information carte micro SD
- Liste des caméras
- Réinitialisation
- Formatage micro SD
- Version du système

## Caractéristiques

Platine extérieure			
Fréquence de transmission	2.400GHz~2.4835GHz	Balance des blancs	Auto
Portée (en champ libre)	Extérieur:200m, Intérieur:50m	Optique	4.9mm / F2.8
Capteur d'images	1/4 "image couleur CMOS	Angle de vue	50
Consommation d'énergie	500mA Max (cells), 400mA Max (+12V DC)	Sensibilité minimale	1 LUX (sans lumière LED)
Température de fonctionnement	-15°C ~ 40°C	LED	6 LEDs
Dimensions(LXHP)	185x68x50mm	Alimentation requise	+9~12V DC +-5% /2 LR14(C), 1.5V batteries

Unité intérieur	
Fréquence de réception	2.400GH~2.4835GHz
Moniteur	7" TFT LCD
Résolution	800 480(RGB)
Alimentation	+5V DC
Consommation d'énergie	450mA Max
Température de fonctionnement	-10°C~40°C
Dimensions(LXHP)	255x140x52mm
Nombre d'unités extérieures supportées (platine ou camera)	Max.4




Caméra			
Fréquence de transmission	2.400GH~2.4835GHz	Sensibilité minimale	1 LUX (sans lumière LED )
Portée (en champ libre)	Extérieur:200m, Intérieur:50m	LED	16 IR LEDs
Capteur d'images	1/4"image couleur CMOS	Alimentation requise	+12V DC
Balance des blancs	Auto	Consommation d'énergie	450mA, +12V DC
Optique	3.6mm / F2.4	Température de fonctionnement	-15°C~40°C
Angle de vue	65	Dimensions(LXHP)	147x71x54mm

✎ La conception et les spécifications sont sujets à changement sans préavis.

# 2ème partie: Téléphone DECT


## ■ Fonctions du combiné

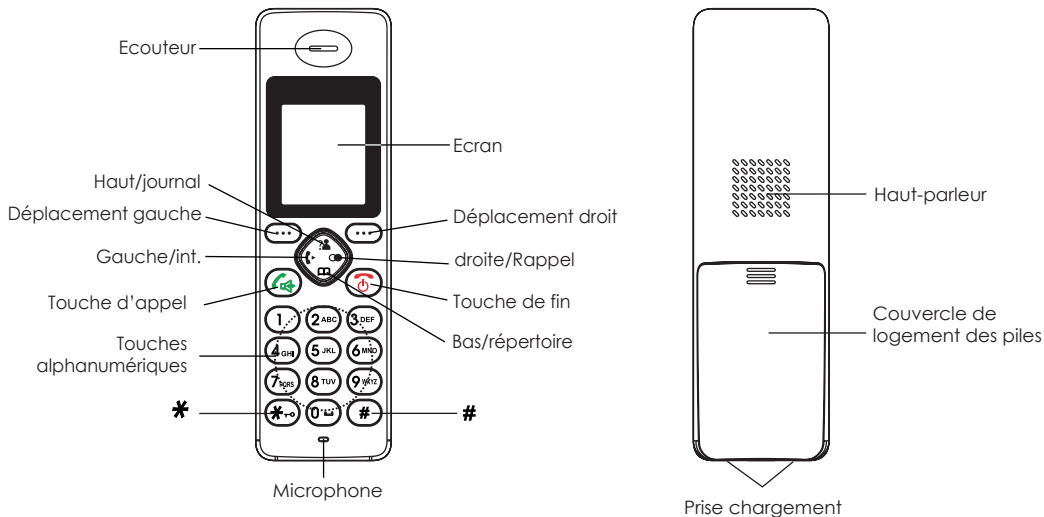


## Fonctions du moniteur

### Base

#### Vue de face

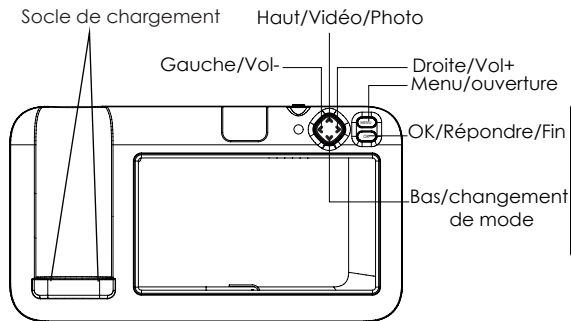

#### Vue arrière

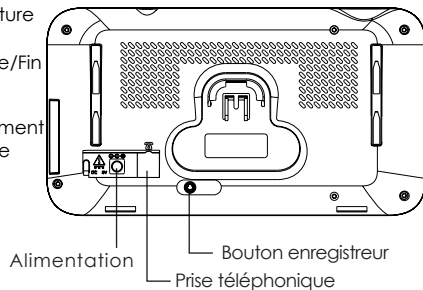

## Description des touches



### Composition/conversation

Faire/Répondre un appel

Activer le haut-parleur pendant un appel.(voir page 24)



### Touche de fin

Raccrocher.

Une longue pression pour allumer ou éteindre.

### Touches de navigation:



#### Haut/journal d'appels

Parcourir les options du menu.

Augmenter le volume de l'écouteur ou haut-parleur pendant l'appel.

Entrer dans le journal d'appels.



#### Bas/répertoire

Parcourir les options du menu.

Diminuer le volume de l'écouteur ou du haut-parleur pendant l'appel.

Entrer dans le Répertoire.



#### Gauche/Interne


Prendre un appel interne provenant d'un autre combiné.

Transférer un appel entrant vers un autre combiné

Se mettre en mode conférence.



## ■ Description des touches (suite)

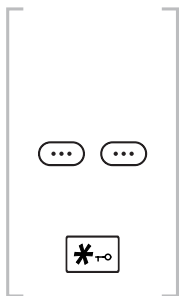

### **Droite/ rappel**

Entrer dans le journal d'appels émis.  
Insérer une pause

### **Touches de fonction**

Valide la fonction indiquée juste au-dessus du texte  
qui change en fonction de l'option du menu

### **\***

Maintenez enfoncé pour activer ou désactiver les  
fonctions du clavier.

Mettre en place une conférence téléphonique,  
comme décrit dans la page 38.

## ■ Icônes de l'écran LCD



### **Nouvel appel**

Indique les appels en absence



### **MSG en attente**

Indique la présence de messages vocaux.



### **Occupé**

Indique que la ligne est occupée.



### **Mains libres**

Indique que la fonction mains libres est activée.



### **Témoin de batteries**

Indique le niveau de charge de la batterie



### **Témoin de signal**

Indique la présence du signal. Si le combiné est trop éloigné de la base, le témoin clignotera à l'écran



### **Témoin d'alarme**

Ce témoin apparaît lorsque vous avez programmé la sonnerie de l'alarme à une heure précise.




### **Verrouillage clavier**

Ce témoin apparaît lorsque le clavier est verrouillé.

## ■ Branchements du moniteur


1. Branchez l'extrémité de l'adaptateur secteur à la prise d'alimentation de la base, puis branchez l'adaptateur CA dans une prise murale.
2. Branchez une extrémité du cordon de la ligne téléphonique à la prise de la ligne téléphonique de la base, et l'autre extrémité à une prise téléphonique murale.

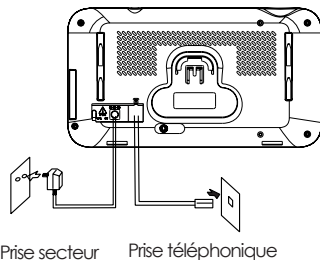

## ■ Mise en place des batteries

Insérez les batteries rechargeables Nimh (AAA size, 1.2V, 600mAh) fournies avec l'interphone avant son utilisation.

1. **Glissez le couvercle du compartiment des batteries dans le sens de la flèche et retirez-le.**
2. **Insérez les batteries neuves comme indiqué sur le schéma en respectant les polarités (+,-).**

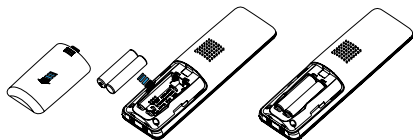


### Remarque :

- Inverser le sens peut endommager le combiné



## Mise en place des batteries (suite)

3. Remettez le couvercle en place en le faisant glisser jusqu'à son enclenchement.

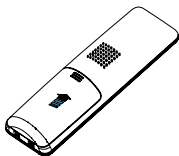

### Remarques:


- Remplacez les batteries si elles ne récupèrent pas leur capacité après recharge.
- Utilisez toujours des batteries rechargeables Ni-MH neuves de qualité. N'utilisez jamais des piles d'un autre type.

## Chargement du combiné

**Important !** : Avant la première utilisation, **rechargez complètement le combiné** pendant minimum **15** heures en le plaçant sur la base.


Pour charger le combiné, le placer sur la base.


Lorsque vous placez le combiné sur la base, il s'allume automatiquement.

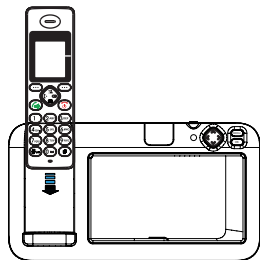


## ■ Allumer/éteindre le combiné

Quand le combiné est éteint, il s'allume automatiquement si vous le placez sur la base. Pour allumer ou éteindre le combiné, suivez ces étapes.

 1. Allumer le combiné, maintenez appuyé  jusqu'à ce que l'affichage apparaisse. Pendant la recherche de la base, le symbole ci-dessous clignotera.




2. Pour éteindre le combiné, maintenez enfoncé  jusqu'à ce que l'affichage disparaisse.

Lorsque le combiné est placé sur la base, l'affichage reviendra en mode standby et indiquera le numéro, le nom enregistré, le témoin de signal et l'heure.


### Note :

 - Si le témoin de charge de la batterie est faible placez le combiné sur la base. **Le combiné doit être chargé entièrement avant utilisation.**



## Fonctions principales

Toutes les étapes détaillées ci-dessous sont possibles uniquement en mode standby.

Mettez le téléphone en mode standby en appuyant sur 


### ■ Passer un appel


1. Décrochez le combiné et appuyez sur 

Résultat : Le témoin  apparaît sur l'écran.

2. Composez le numéro.

3. Pour terminer l'appel, appuyez sur  ou raccrochez le combiné sur la base.

1. En cas d'erreur, vous pouvez modifier la saisie du numéro en cours de composition  en utilisant la touche de fonction Efface pour rectifier. Vous pouvez également utiliser la touche pour marquer les espaces.

2. Lorsque le numéro est correct, appuyez  pour lancer l'appel.


#### Remarque :



- Pour rappeler le dernier numéro composé, utilisez la fonction rappel (voir page 51).

## Réception d'un appel

Quand vous recevez un appel, le message **APPEL** apparaît à l'écran.







Si l'appelant peut être identifié, son numéro est affiché.

Si vous avez un message vocal, l'icône  "MSG EN ATTENTE" apparaîtra à l'écran.

1. Appuyez sur la touche  pour prendre l'appel. Si le combiné est posé sur la base et que vous avez activé la fonction **Réponse Automatique**, il suffit de décrocher le combiné pour prendre l'appel.
2. Pour mettre fin à l'appel, appuyez sur  ou reposez simplement le combiné sur la base. Après l'appel, l'écran affiche la durée de l'appel.

Après l'appel, l'écran affiche la durée de l'appel.

### Remarque :

- Vous pouvez sélectionner le niveau de volume de la sonnerie en appuyant sur la touche  ou .
- Si vous souhaitez désactiver l'icône  appuyez sur la touche , puis appuyez sur la touche . Après cela, appuyez sur la touche  pour revenir en mode de veille. (Le combiné doit être enregistré dans la base.)
- Si la sonnerie polyphonique est réglée, la sonnerie peut continuer pendant 4 secondes après le raccrochage de l'appelant.

## ■ Fonction secret



En cours de conversation, vous pouvez couper temporairement le microphone pour que votre correspondant ne puisse plus vous entendre mais pour que vous puissiez toujours l'entendre.

**Exemple** : Vous voulez communiquer avec une autre personne dans la pièce mais vous ne souhaitez pas que la personne au bout du fil entende.

Pour couper le microphone, appuyez sur la touche **Mute**

Pour réactiver microphone, appuyez de nouveau sur la touche **Mute**



## ■ Réglage du volume



En cours de conversation, appuyez sur  ou  pour régler le volume de l'écouteur (ou le volume du haut-parleur en conversation mains libres). Sélectionnez un des cinq niveau de volume proposé.

 

## ■ Réglage de la sonnerie

Vous pouvez attribuer une sonnerie spécifique pour les appels externes ou internes (provenant des autres combinés enregistrés sur la même base) et réglez le volume.

1.Appuyez sur la touche **Menu**.

2.Tapez  ou  pour sélectionner l'option réglage Combiné puis validez avec la touche de sélection.

3.Avec  ou  sélectionnez Réglage sonnerie puis validez.

4.Puis sélectionnez Sonnerie Interne (INT Ring) ou appuyez  pour choisir sonnerie Externe (EXT Ring), ou encore  pour choisir le volume puis validez.


Résultat: Une sélection de 10 mélodies vous est proposée avec 5 niveaux de volume.

5.Appuyez la touche sélection pour confirmer

### Remarque:

- Si vous désactivez la sonnerie le téléphone affichera uniquement un message d'appel entrant.

## ■ Rappel du dernier numéro

1. Appuyez sur  ou la touche rappel en mode standby.



Résultat: l'écran affiche le dernier numéro composé.

2. Appuyez sur  pour émettre l'appel

Vous téléphone vous permet de récupérer et de rappeler les 10 derniers numéros composés.

### Chercher et rappeler un numéro dans le journal d'appels émis

1. Appuyez sur la touche **Rappel** en mode standby.

2. Faites défiler la liste des appels émis avec les touches  ou  jusqu'au numéro à composer.

3. Appuyez la touche  pour lancer l'appel.



#### Remarque:

- Si aucun numéro n'est trouvé, "Vide" apparaît à l'écran.
- Lorsque le journal de rappel est plein, chaque fois que vous composerez un nouveau numéro, le numéro le plus ancien enregistré sera automatiquement effacé.

### Utiliser les options du journal d'appels

En utilisant les options, vous pouvez ajouter un numéro au répertoire ou le supprimer.

1. Appuyez sur la touche **Rappel**

2. Faites défiler la liste avec  ou  jusqu'au numéro souhaité.

3. Appuyez sur la touche **Plus** pour sélectionner l'option souhaitée :

- **Ajout au répertoire** : enregistrez le numéro en suivant les étapes à partir du point 4 du chapitre suivant « ajout d'un numéro dans le répertoire ».
- **Supprimer** : permet d'effacer le numéro sélectionné.
- **Effacer tout** : pour effacer tout le journal d'appels. Appuyez la touche Sélection pour valider ou retour pour revenir au menu.


4. Pour retourner au mode standby, appuyez sur 


**Remarque :**

A l'étape 3, lorsque vous sélectionnez **Supprimer toutes** les options, un message "**Confirmer**" apparaît afin de valider la suppression définitive. Pour confirmer appuyez sur la touche **Select**, pour revenir en arrière appuyez sur la touche **Back**.



## ■ Journal d'appels


Si vous êtes abonné au service présentation du numéro de votre opérateur téléphonique, vous pouvez visualiser le numéro de l'appelant (à condition que l'appelant n'ait pas masqué son numéro). Si vous avez des appels en absence, le témoin  s'affichera sur l'écran.

Si la mémoire est pleine, le témoin clignotera à l'écran .

**Out Of Area** - Ce message s'affichera lorsque l'option présentation du numéro n'est pas active.



**Out Of Area** - Ce message s'affiche si l'appelant a masqué son numéro.

## Consulter ou composer un numéro du répertoire

2. Utilisez les touches sélection pour sélectionner Répertoire. Vous pouvez aussi accéder directement au répertoire en appuyant en mode standby sur la touche .

3.  ou  pour défiler les numéros. Pour lancer un appel . Vous pouvez également ajouter une entrée dans le répertoire.



### Note :

- A l'étape 3, chaque élément de la liste de réception est indiqué par l'icône  si l'appel a été examiné ou avec l'icône  si l'appel n'a pas encore été évalué.

## Ajouter un contact au répertoire



1. Appuyer sur la touche **Menu**.



2. Avec les touches de navigation, sélectionnez **Répertoire**

3. Avec  ou , parcourez la liste jusqu'au numéro souhaité puis appuyez sur la touche Plus pour entrer dans le menu **Ajout dans répertoire**.



4. En appuyant sur la touche Sélection, vous êtes invité à entrer un nom.
5. Saisissez le nom et appuyez sur la touche Enregistrer, vous pouvez ensuite modifier le numéro que vous souhaitez enregistrer.
6. Appuyez sur la touche Enregistrer, vous pouvez sélectionner une des dix mélodie de sonnerie. Appuyez sur la touche Sélection, vous entendrez un bip de confirmation.

## Supprimer un numéro dans le répertoire.


1. Appuyez sur la touche **Menu**.
2. Utilisez les touches de navigation pour sélectionner Répertoire.
3. Faites défiler la liste avec  ou  jusqu'au numéro à supprimer.
4. Quand le numéro souhaité apparaît, appuyez sur la touche Plus


 
5. Avec  ou , sélectionnez **Effacer**. Vous entendrez un bip de confirmation et l'écran affichera le prochain numéro.



## Supprimer tous les numéros du répertoire

1. Appuyez sur la touche **Menu**.
2. Utilisez les touches de navigation pour sélectionner Répertoire.
3. Appuyez sur la touche Plus puis  ou  pour sélectionner l'option **Tout supprimer**.
4. Lorsque l'écran affiche "Confirmation", validez avec la touche de Sélection. Vous entendrez un Bip et votre téléphone reviendra en mode standby après avoir effacé tous les numéros du répertoire.

## ■ Verrouillage du clavier

En activant cette fonction, toutes les touches seront verrouillées. Vous pouvez répondre aux appels en appuyant sur . Mais lorsque vous raccrocherez les touches seront à nouveau verrouillées. Ce mode permet d'éviter d'appuyer involontairement sur une touche.

  Pour verrouiller les touches, en mode standby maintenez appuyé  jusqu'à affichage de l'indication « HS locked» et du témoin 


 
Pour déverrouiller, maintenez à nouveau appuyé la touche  jusqu'à ce que disparaisse de l'écran le témoin 

### Remarque :

- En mode verrouillé, lorsque vous appuyerez sur une touche, le téléphone émettra un bip et affichera le message « HS Locked».

## Réponse automatique



Vous pouvez prendre simplement en décrochant le combiné de la base sans même devoir appuyer sur une touche.




 
1. Appuyez la touche **Menu**.
2. Avec  ou  sélectionnez **HS Settings**, puis validez.





## Langue

Vous pouvez modifier la langue d'affichage des menus en sélectionnant l'une des 11 langues proposées:

Anglais, Allemand, Français, Néerlandais, Suédois, Polonais, Italien, Turc, Espagnol, Portugais et Slovaque.

1. Appuyez sur la touche **Menu**.
2. Avec  ou  sélectionnez l'option réglage Combiné puis validez.

3. Avec  ou  sélectionnez **Réponse Automatique** puis validez.
4. Avec  ou  choisissez On/Off pour activer ou désactiver la fonction. Vous entendrez un bip de confirmation.

3. Avec  ou  sélectionnez l'option Langue puis validez.
4. Les langues s'afficheront. Utilisez  ou  pour faire défiler la liste et sélectionnez la langue souhaitée. Vous entendrez alors un bip de confirmation.

## Nom du combiné

En utilisant cette fonction, vous attribuez un nom au combiné afin de faciliter la reconnaissance si vous avez plusieurs combinés enregistrés à la base.

Pour enregistrer un nom:

1. Appuyez sur la touche **Menu**.

1. Avec  ou  sélectionnez l'option réglage Combiné puis validez.



3. Avec  ou  sélectionnez Nom du combiné puis validez


4. Entrez un nom jusqu' à 12 caractères avec le clavier alphanumérique puis enregistrez.

 
## Bip de portée

Durant un appel, vous pourrez entendre un bip si le combiné est hors de portée de la base.

1. Appuyez sur la touche **Menu**.

2. Avec  ou  sélectionnez l'option Réglage Combiné puis validez.


3.  ou  sélectionnez **Réglage Son** puis validez.

4.  pour choisir Bip de portée, puis validez.

5. Avec  ou  activez ou désactivez la fonction.


## ■ Recherche combiné

Vous pouvez localiser le combiné à partir de la base en le faisant sonner.

Appuyez  sur la base (moins de 5 secondes), tous les combinés enregistrés sonneront pendant environ 60 secondes.




Pour stopper, appuyez  à nouveau ou n'importe quelle touche du combiné.


 
### Note:

- Dans le cas d'une pression sur la touche , supérieure ou égale à 5 secondes, la base entrera en fonction Mode. Pour plus de détails, voir page 36.

## ■ Mode de numérotation

Vous pouvez changer de mode de numérotation : par impulsions (Pulse) ou par fréquences (Tones)

1. Appuyez sur la touche **Menu**.
2. Avec  ou  sélectionnez **Réglages Base** puis validez.
3. Appuyez  Pour choisir Mode de numérotation, puis validez.


 
4. Appuyez sur  ou  pour sélectionner le mode de numérotation souhaité (Pulse/Tones). Un Bip de confirmation sera émis.

### Note:

- Si vous n'êtes pas sûr du mode sélectionné doit être choisi, s'il vous plaît contactez votre fournisseur de service local


 
## ■ Fonction mains Libres

Pendant un appel, vous pouvez activer le haut-parleur intégré au combiné. Posez simplement le combiné sur une surface plane pour profiter du confort d'une conversation en mains libres.

Pour activer, appuyez sur la touche  en cours de conversation. L'icône  apparaîtra sur l'écran.

## ■ Signal Flash

Si vous êtes abonné au service de signal d'appel ou de conférence à trois, vous pouvez utiliser cette fonction. Pour plus de détails, contactez votre opérateur téléphonique.

Pour désactiver, et revenir sur le mode de conversation normal, appuyez à nouveau sur  et l'icône  disparaîtra.



### Notes:

- Avant de porter le combiné à votre oreille assurez-vous que le haut parleur soit désactivé.
- Pour régler le volume du haut-parleur, voir page 49.

Pour utiliser ces services spéciaux, appuyez simplement sur la touche **Flash** lorsque la ligne est occupée: l'écran affiche **R**.


## ■ Navigation dans le menu

### Pour accéder à l'option menu:

1. Pour afficher les options, appuyez sur **Menu**.
2. Faites dérouler les options, en appuyant sur  ou  successivement.
3. Pour sélectionner le menu, appuyez sur la touche de sélection lorsque le menu souhaité apparaît à l'écran.
4. Répétez si nécessaire.

### Pour retourner en mode standby:

Si vous appuyez sur la touche Retour à partir de n'importe quel menu, vous retournez à l'écran précédent.

Pour retourner au mode standby, appuyez sur .

Aussi, le téléphone reviendra automatiquement en mode standby, si aucune touche n'est appuyée pendant 40 secondes.

#### **Note :**

- *En mode standby, appuyez sur  pour faire passer le rétroéclairage de on/off.*



## Options menu

### 1. Journal d'appels (page 18)

### 2. Répertoire

- Nouveau (page 63)
- Détails (page 64)
- Modifier (page 64)
- Supprimer (page 65)
- Supprimer tout (page 65)
- Statut Répertoire (page 65)

### 3. Réglages Base

- Désactiver combiné (page 65)
- Mode de numérotation (page 58)
- Durée Flash (page 59)
- Modification code PIN (page 66)

### 4. Réglage Combiné

- Alarme (page 67)
- Sonnerie (page 50)
- Tonalité (page 57, 68)
- Langues (page 56)
- Nom combiné (page 57)
- Contraste écran (page 69)
- Réponse automatique (page 56)
- Date & heure (page 69)
- Sélection d'une base (page 70)

### 5. Enregistrement (page 70)

### 6. Réglage par défaut (page 71)

## Répertoire




Le répertoire intégré à votre téléphone vous permet d'enregistrer les numéros que vous souhaitez appeler fréquemment.

### Liste de caractères

Pour entrer un caractère alphanumérique, appuyez une ou plusieurs fois sur la touche principale pour afficher le caractère souhaité selon les indications du tableau ci-dessous.

Touche	Caractère affiché dans l'ordre de saisie									
0	(spc)	0	?	&	/	.	,	!		
1	1	_	+	-	"	(	)	%		
2	A	B	C	a	b	c	2			
3	D	E	F	d	e	f	3			
4	G	H	I	g	h	i	4			
5	J	K	L	j	k	l	5			
6	M	N	O	m	n	o	6			
7	P	Q	R	S	p	q	r	s	7	
8	T	U	V	t	u	v	8			
9	W	X	Y	Z	w	x	y	z	9	

## Ajouter une entrée au répertoire


1. Appuyez sur la touche **Menu**.
2. Appuyez  pour choisir Répertoire, puis validez.
3. Sélectionnez **Nouveau**.
4. "Nom ?" s'affiche. Entrez le nom puis enregistrez pour confirmer. "Numéro?" s'affiche alors. Entrez alors un numéro (jusqu'à 24 caractères), puis enregistrez.
- 5.\*Tapez  ou  pour sélectionner la sonnerie que vous souhaitez associer au numéro puis validez.
6. Répétez si nécessaire.

\* Si vous souhaitez entrer un numéro VIP, vous pourrez sélectionner une des neuf sonnerie spéciale.



 
### Note:

- Si vous faites une erreur en saisissant un nom ou un numéro, appuyez sur la touche "effacer" pour effacer le dernier caractère.


## Insérer une pause

Vous pouvez avoir besoin d'insérer une pause pour dialoguer avec une interface vocale automatique par exemple un service bancaire par téléphone. Une pause correspond à une attente de 3 secondes. Si vous souhaitez insérer une pause en composant le numéro en mode standby, appuyez sur la touche . La lettre P apparaît à l'écran.





## Consulter une entrée du répertoire

 1. En mode standby, tapez sur .
2. Tapez  ou  pour accéder à l'entrée souhaitée.







## Composer un numéro du répertoire

Référez-vous au chapitre précédent « consulter une entrée du répertoire » puis appuyez sur 

 




## Consulter les détails d'une entrée

1. Appuyez sur la touche **Menu**.
2. Tapez sur  pour choisir **Répertoire**, puis validez.
3. Tapez  ou  pour choisir **Répertoire**, puis validez.
3. Tapez sur  pour sélectionner **voir**.

## Modifier une entrée du répertoire

1. Appuyez sur la touche **Menu**.
2. Tapez sur  pour choisir **Répertoire**, puis validez.
3. Tapez  ou  successivement pour afficher l'entrée à modifier puis validez.
4. Tapez  pour choisir l'option **Modifier** puis validez.
5. Si nécessaire, appuyez sur la touche Effacer pour corriger. Saisissez le nom et le numéro puis enregistrez.
6. Tapez  Ou  pour sélectionner la sonnerie à associer au numéro puis enregistrez.

## Effacer une entrée du répertoire

1. Appuyez sur la touche **Menu**.
2. Tapez sur  pour choisir **Répertoire**, puis validez
3. Tapez  ou  successivement pour faire apparaître le nom à supprimer.
4. Tapez  ou  pour choisir **Supprimer**. Validez pour supprimer ou appuyez sur la touche **Retour** pour sortir.
5. A l'étape 4, si vous choisissez l'option **Tout Supprimer** et validez après le message "Confirmation", toutes les entrées du répertoire seront supprimées.




## Statut Répertoire

Le statut du répertoire indique le nombre d'entrée enregistrées. Sélectionnez l'option du menu pour consulter l'information.

## ■ Réglages de la base







### Désactiver un combiné

Cette fonction vous permet de supprimer l'enregistrement d'un combiné rattaché à la base.

1. Appuyez sur la touche **Menu**.
2. Tapez sur  pour choisir **Réglages Base**, puis validez.
3. Sélectionnez l'option **Désactiver le combiné**. L'écran affichera «PIN ?» pour vous inviter à saisir le code PIN (par défaut le code PIN est «0000»), puis validez.
4. Tapez  ou  pour sélectionner un combiné, puis validez pour confirmer. Le combiné sélectionné ne sera plus enregistré à la base.





## Durée du Flash

Vous pouvez modifier la durée du Flash:

1. Appuyez sur la touche **Menu**.
2. Tapez  ou  pour choisir **Réglages Base** puis validez.
3. Tapez  ou  pour choisir l'option **Durée Flash** puis validez.
4. Tapez  ou  pour sélectionner **Flash-1/Flash- 2/Flash-3**, puis validez.

## Modifier le code Pin





Cette fonction vous permet de modifier le code Pin. Par défaut le code est 0000.



1. Appuyez sur la touche **Menu**.
2. Tapez  ou  pour choisir **Réglages Base**, puis validez.
3. Tapez  ou  pour choisir **Modifier PIN**, puis validez.
4. L'écran affiche "PIN?". Entrez le code actuel puis validez. Vous serez invité à saisir le nouveau code.
5. Saisissez le nouveau code puis validez. Vous serez invité à confirmer le code. Saisissez-le à nouveau puis validez pour quitter.

## ■ Réglages du combiné


### Réglage Alarme

Vous pouvez programmer une alarme:

1. Appuyez sur la touche **Menu**.
2. Tapez  ou  pour choisir **Réglage Combiné**, puis validez.
3. Sélectionnez l'option **Alarme**.
4. Tapez  ou  pour sélectionner **On/Off**, puis validez.
5. En sélectionnant **On**, un message sur l'écran vous invitera à saisir l'heure.


 




6. Validez et l'écran affichera Snooze **On/Off**. Tapez sur  ou  pour activer ou désactiver cette fonction de répétition d'alarme
7. Quand l'alarme sonne, appuyez sur n'importe que touche pour la stopper.

#### Remarques :

- A l'étape 5, saisissez l'heure au format 24h.
- Tapez sur n'importe quelle touche pour arrêter l'alarme quand elle sonne.
- Si vous activez la fonction **Snooze On**, l'alarme sonnera à intervalle régulier de 11 minutes. Si vous appuyez sur la touche  lorsque l'alarme sonne, l'option sera désactivée **Snooze Off**.

## Tonalité Clavier

Le combiné confirme chaque pression sur une touche par un Bip. Vous pouvez désactiver cette fonction pour un usage silencieux. Toutefois un bip d'avertissement sera émis en cas d'erreur de saisie.

1. Appuyez sur la touche **Menu**.
2. Tapez  ou  pour choisir **Réglage Combiné**, puis validez.
3. Tapez  ou  pour sélectionner **Réglages Tonalité**, puis validez.
4. Validez à nouveau pour choisir **Tonalité Clavier**
5. Tape  ou  pour activer ou désactiver la fonction.
6. Puis validez.








### Remarque :

- *En usage normal, nous conseillons de laisser la fonction active pour faciliter l'usage du téléphone*





## Contraste de l'écran d'affichage







Ce réglage vous permet d'optimiser la visibilité de l'écran en modifiant le contraste pour l'adapter aux conditions de luminosité ambiantes .

1. Appuyez sur la touche **Menu** .
2. Tapez  ou  pour choisir Réglages Combiné, puis validez .
3. Tapez  ou  pour sélectionner **Réglage Contraste**
4. Tapez  ou  successivement pour choisir parmi les 17 niveaux de contraste puis enregistrez.
5. Appuyez  pour retourner au mode standby.



## Réglage Date & heure

### 1. Format Date & Heure

1. Appuyez sur la touche **Menu**.
2. Tapez  ou  pour choisir Réglages Combiné puis validez.

3. Tapez  ou  pour choisir Date & Heure puis validez.
4. Tapez  ou  pour choisir Format Date et Format Heure , puis validez .
5. Tapez encore  ou  pour choisir Date Format (JJ-MM-AA/MM-JJ-AA) ou le Format Heure (12 ou 24 H ), puis enregistrez.

### 2. Réglage Date et heure







1. Renouvelez les étapes 1 à 3
2. Tapez  ou  pour choisir réglage Date ou Heure, puis validez.
3. Saisissez l'heure et la date avec le clavier numérique puis enregistrez avant de quitter.

#### Notes :

- Si vous sélectionnez **12 heures**, **AM PM** apparaît sur la droite de l'heure en mode veille.
- A l'étape 3, vous devez entrer l'heure au format 24 heures

## Sélectionner une base

Votre combiné peut fonctionner avec des bases différentes, à la condition qu'il ait déjà enregistré dans chacune des bases.



1. Appuyez sur la touche **Menu**.
2. Tapez  ou  pour choisir Réglages Combiné puis validez.
3. Tapez  ou  pour choisir l'option Base (BS) puis validez.
4. Tapez  ou  pour sélectionner la base que vous souhaitez puis validez. Si vous sélectionnez une base non existante, vous entendrez un bip d'avertissement.
5. L'écran indiquera "**BS Selected**". Validez à nouveau jusqu'au bip de confirmation.

## ■ Réinitialisation

Si vous réinitialisez le combiné ou la base, l'ensemble des fonctionnalités paramétrables par l'utilisateur seront restaurées aux valeurs par défaut. Cela peut être utile dans les cas suivants :

Vous avez fait une erreur de paramétrage et vous voulez retrouver les valeurs par défaut du combiné.

Si le téléphone présente des dysfonctionnements logiques (erreurs de symboles affichés à l'écran, erreur d'affectation de touche etc...), cela peut être dû à des perturbations dans l'alimentation électrique ou à des pointes électrostatiques susceptibles d'altérer temporairement la mémoire du microprocesseur interne. Réinitialiser l'appareil peut résoudre le problème.

1. Appuyez sur la touche **Menu**.
2. Tapez  ou  successivement pour choisir Réglages par défaut puis validez.

3. L'écran affichera "**PIN?**". Saisissez le code PIN, puis validez. Si le code est correct, l'écran affichera « **Confirmer** ». Validez pour confirmer ou appuyez sur la touche **Retour** pour quitter.

## ■ Double appel

Si vous avez souscrit à l'option double appel, le téléphone affichera le nom et le numéro du deuxième appelant.

### Note :

- Si vous avez transféré un appel externe vers un autre combiné, vous ne pouvez pas utiliser l'appel fonction d'attente via le second combiné.

### Information appel 1

Appelant 1  
4361234

### Information appel 2

Appelant 1  
4  
Appelant 2  
2915678

1. Lorsque vous êtes en ligne, l'écran affiche automatiquement le numéro du deuxième appelant.
2. Appuyez la touche **Flash** pour répondre au deuxième appel.
3. Lorsque vous avez terminé, appuyez à nouveau la touche **Flash** pour revenir à la conversation avec le premier appelant.

## Liste des caractéristiques

- 1.8GHz technologie DECT
- Affichage LCD (128X64 points)
- Jusqu' à 5 combinés reliés sur une même base
- Jusqu'à 4 bases paramétrables pour un combiné
- Réglage du contraste de l'écran LCD
- Répertoire jusqu'à 50 entrées
- 9 mélodies VIP
- Journal de rappels jusqu'à 10 entrées
- 10 mélodies de sonnerie
- Tonalité de clavier
- Bip de portée
- Haut-parleur pour fonction mains libres
- Appel Interne
- Transfert d'appels
- Mode conférence à trois
- Volume micro et écouteur ajustable
- Protection code Pin
- Pré-composition
- Rappel, Flash, Pause, Mute
- Mode numérotation TONE/PULSE
- Durée FLASH réglable
- Affichage durée d'appels
- Réglage Date & heure
- Verrouillage clavier
- 11 langues de menu
- Fonction réponse automatique
- Fonction Alarme avec option "snooze"
- Paramétrage nom du combiné
- étro éclairage écran LCD et clavier
- Basse radiation (option)
- Double système FSK et DTMF
- Double appel / appel en absence
- Journal d'appels jusqu'à 40 entrée
- Ajout/suppression entrée dans répertoire
- Messagerie

### Note :

- *Les fonctions présentation du numéro et double appel ne sont valables que si vous avez souscrit ces options auprès de votre opérateur.*

## Guide dépannage

Symptômes	Vérifications et solutions
<b>Pas de fonctionnement</b>	<ul style="list-style-type: none"> <li>• Vérifiez les branchements.</li> <li>• Vérifiez que le cordon d'alimentation soit correctement branché.</li> <li>• Vérifiez que les batteries du combiné soient bien rechargées.</li> <li>• Vérifiez que les batteries soient correctement installées.</li> </ul>
<b>Pas de tonalité</b>	<ul style="list-style-type: none"> <li>• Vérifiez que le cordon téléphonique soit bien branché</li> <li>• Vérifiez tous les branchements</li> </ul>
<b>Rien ne s'affiche</b>	<ul style="list-style-type: none"> <li>• Vérifiez que les batteries soient bien installées.</li> <li>• Vérifiez que Les batteries du combiné soient bien rechargées.</li> <li>• Vérifiez que le combiné soit bien allumé</li> </ul>
<b>Le niveau de charge de la batterie est très faible</b>	<ul style="list-style-type: none"> <li>• Vérifiez et nettoyez les contacts de chargement.</li> <li>• Remplacez les batteries par des neuves si nécessaire</li> <li>• Assurez-vous que les batteries correspondent à celles indiquées dans ce manuel</li> </ul>
<b>Le numéro ne s'affiche pas</b>	<ul style="list-style-type: none"> <li>• Assurez-vous que vous avez souscrit à ces options auprès de votre opérateur.</li> <li>• L'appelant peut masquer son numéro</li> <li>• Laisser sonner un peu le temps que les informations apparaissent.</li> </ul>

## Descriptif technique

Plage de fréquence	1.88~1.90GHz
Canaux	120 Duplex channels
Puissance de l'onde porteuse	<250mW
Modulation	GFSK
Stabilité de fréquence	< 50 KHz
Temps de recharge	15 hours
Température de fonctionnement	Normal: 15°C ~ 35°C, Extrême: 0°C ~ 40°C
Humidité	0%~90%
Dimensions (mm)	Base: 102 x 100 x 105; Combiné: 160 x 48 x 28
Alimentation	Entrée Base : 7.5V, 300mA; Entrée combiné: Ni-MH: 1.2V x 2, 600mAh

✍ Les caractéristiques et fonctionnalités des appareils pourront être modifiées sans préavis.


 


## Si vous vous abonnez à un service DSL

Ajoutez un filtre de bruit (contactez votre fournisseur de service DSL) sur la ligne téléphonique entre le socle et la prise de la ligne téléphonique dans le cas de ce qui suit:

- On entend du bruit pendant les conversations.
- Caractéristiques de l'afficheur ne fonctionnent pas correctement.

Prise de téléphone  
à ligne unique

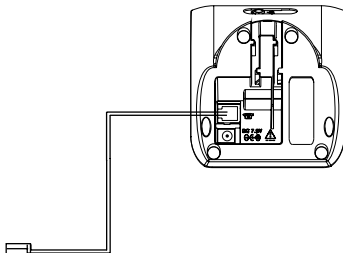







**Hotline assistance technique FR**  
au 0 892 350 490 (0.34 € TTC la minute)  
horaire hotline, voir sur le site internet

**[scs-laboutique.com](https://www.scs-laboutique.com)**

**KIT EVOLUTIF Wireless:  
Video intercom / CCTV  
DECT phone**

User's manual



**CE**

V.06-2014 / Ind.A

## Index

### ■ Congratulations

...on purchasing our high quality product.

Please read the manual carefully before installing your system and follow all of the directions to ensure proper installation, so you can get the best out of your new product.

This product includes two parts: **Video intercom / CCTV** and **DECT Phone** part.

### ■ Safety Precautions


To reduce the risk of electrical shock and injury, please follow these basic safety precautions before using the product.

1. Carefully read and observe the instructions in this manual.
2. Follow all warnings marked on the unit.
3. Must set the time and the date when replace batteries.
3. Unplug this product from the wall outlet before cleaning, then use a damp cloth to wipe. Do not use liquid or aerosol cleaners.
4. Do not place objects on the line cord that may cause damage.
5. Do not place the Outdoor phone and Camera near the metal.

6. Pay attention to the polarity of the batteries, insert the rechargeable batteries in accordance with polarity symbols (this instruction is found in the installing batteries section.)
7. Unplug this phone from the wall outlet and refer servicing to qualified service personnel only.
8. Pay attention to the polarity of the batteries, insert the rechargeable batteries in accordance with polarity symbols (this instruction is found in the installing batteries section.)
9. Use only **the batteries indicated in the User's Manual**. Never use other ordinary batteries or conventional alkaline batteries. Otherwise this may not only cause personal injuries but also damage to the unit.
10. Do not mix exhausted batteries with full batteries. Exhausted batteries shall not be disposed of with the usual household waste or in a fire.
11. If the handset will not be used for a long period of time, remove the batteries to prevent possible leakage.
12. Use only **the power supply indicated in the User's Manual**.
13. Keep the phone out of the reach of children.
14. Use the phone only in the described manner.
15. Stop using the phone if it becomes damaged.

## ■ Unpacking


Once you have unpacked your phone, make sure that all the parts shown below are available. If any pieces are missing or broken, please promptly call your dealer.

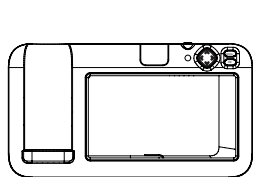

Indoor phone  
(Base)



 
Indoor phone  
(Handset)



Outdoor  
phone



 Antenna  
(Optional)



Rain cover



Camera



Stand



Antenna  
(Camera)



User's manual



2 AAA Ni - MH  
batteries



Adapter\*  
(2)



Line cord\*



Outdoor phone  
rear cover



Screws

\*The shape of the plug can vary according to each country's specification.

# Contents

<b>Index</b>	<b>1</b>		
Congratulations	1	Installing Batteries	14
Safety precautions	1	Charging Handset	15
Unpacking	3	Connecting the Power	16
		Checking the Video Signal	18
<b>Part 1: Doorbell</b>			
<b>Prior To Use</b>	<b>4</b>	<b>Operations</b>	<b>19</b>
Introduction	4	Registering the Outdoor phone	19
Phone Layout and Keys Function	5	Registering the Camera	20
Indoor Phone Keys Description	10	Turning On/Off	21
		Calling Indoor phone	21
<b>Installation Instruction</b>	<b>12</b>	Unlocking	22
Attaching the Camera	12	Light Sensor	22
Installing the Indoor phone	13	Power Indicator	22
Installing the Outdoor phone	13	Taking photos and Recording	22
		Switching the Camera Mode	23
		<b>Screen Description</b>	<b>24</b>

# Contents

<b>Mode Description</b>	<b>26</b>	<b>Auto Switch Time</b>	<b>32</b>
<b>The Menu Mode</b>	<b>26</b>	<b>SD information</b>	<b>33</b>
<b>The Camera Mode</b>	<b>26</b>	<b>Default Settings</b>	<b>33</b>
<b>The Motion Detection Recorder Mode</b>	<b>27</b>	<b>Format SD</b>	<b>34</b>
		<b>Software Version</b>	<b>34</b>
<b>Menu Description</b>	<b>28</b>	<b>Menu Map</b>	<b>35</b>
<b>Time</b>	<b>28</b>		
<b>Volume</b>	<b>28</b>		
<b>Video Playback</b>	<b>29</b>		
<b>Photo Playback</b>	<b>29</b>		
<b>Cyclic Recorder</b>	<b>30</b>		
<b>Monitor Recorder Mode</b>	<b>30</b>		
<b>Doorbell Auto. Recorder</b>	<b>31</b>		
<b>Doorbell Snapshot Mode</b>	<b>31</b>		
<b>Brightness</b>	<b>32</b>		
		<b>Technical Specifications</b>	<b>36</b>



# Contents

## Part 2: Dect Phone

### Prior To Use

39

Phone Layout and Keys Function	39
Keys Description	41
LCD Window Icons Description	43
Connecting Lines	44
Installing Batteries	44
Charging Handset	45
Turning Handset On/Off	46

### Basic Functions

47

Making a call	47
Receiving a call	48
Muting the Microphone	49
Adjusting Voice Volume	49
Ringer Setting	50
Last Number Redial	51
CID Book	53
Key Lock	55
Auto Answer	56
Selecting a Language	56
HS Name	57
Range Alarm	57
Paging	58
Dial Mode	58
Handsfree	59
Flash Signal	59

# Contents

<b>Advanced Functions</b>	<b>60</b>
<b>Menu Navigation</b>	<b>60</b>
<b>Menu Map</b>	<b>61</b>
<b>Phone Book</b>	<b>62</b>
<b>BS Settings</b>	<b>65</b>
<b>HS Settings</b>	<b>67</b>
<b>Registration</b>	<b>71</b>
<b>Default</b>	<b>72</b>
<b>Caller ID on call waiting</b>	<b>75</b>
<b>Feature List</b>	<b>76</b>
<b>Troubleshooting</b>	<b>77</b>
<b>Technical Specifications</b>	<b>78</b>

# **PART 1: Doorbell**

## ■ Introduction


- Supports up to 4 outdoor units/cameras
- 7" (800x480) QVGA LCD display
- 2.4GHz wireless IP54 camera
- Full digital duplex intercom
- 4 images can be automatically and manually switched
- IR cut
- 2-Way audio
- Wide angle lens and LED for night vision
- Long standby doorbell (battery up to 2 years or connect with DC+9~12V )
- PSTN/DECT phone functions
- Both handset and the base unit can talk with visitors and unlock the door
- Motion detection
- Brightness and talk volume are adjustable
- Crystal sound quality with up to 50m indoor and 200m outdoor
- Remote door opening (Optional)
- Video record with microSD card (microSD card not included)
- Outdoor station Ip55
- DIY installation to save high labor cost

## ■ Phone Layout and Keys Function


### Indoor Phone



#### Base

##### Front view

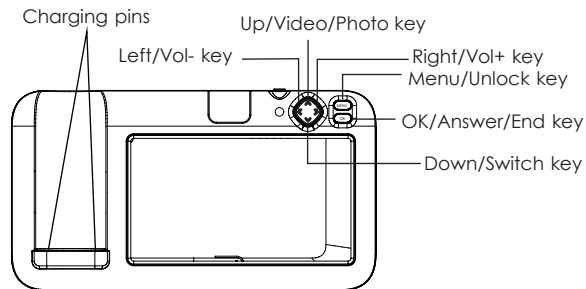


##### Rear view

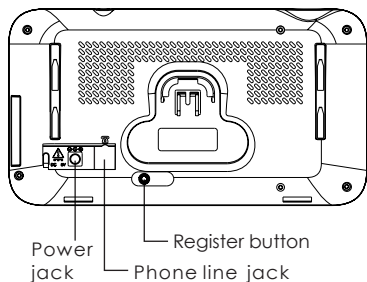

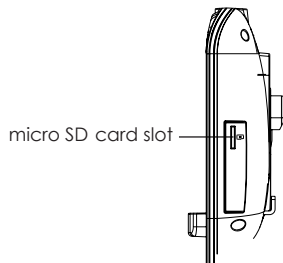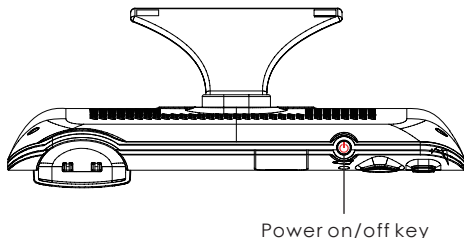
**Side view****Top view**

## Handset


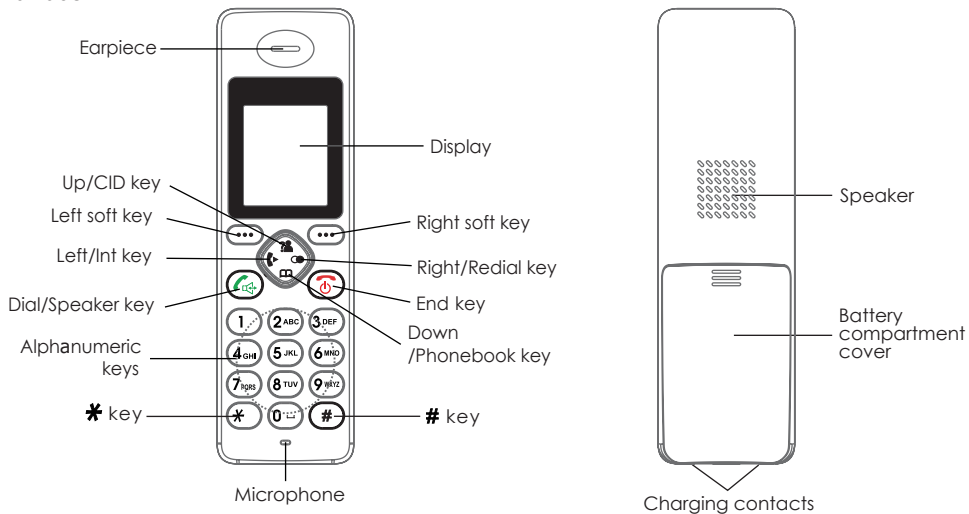


# Camera

Front view

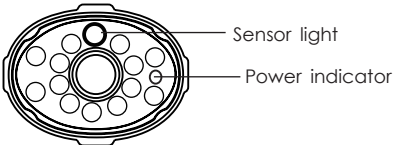


Rear view

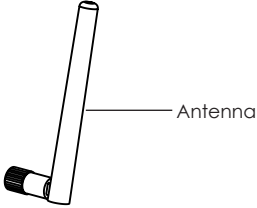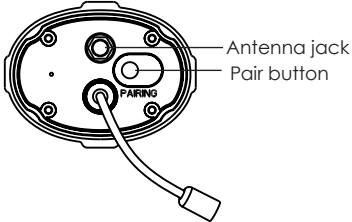



## Outdoor Phone

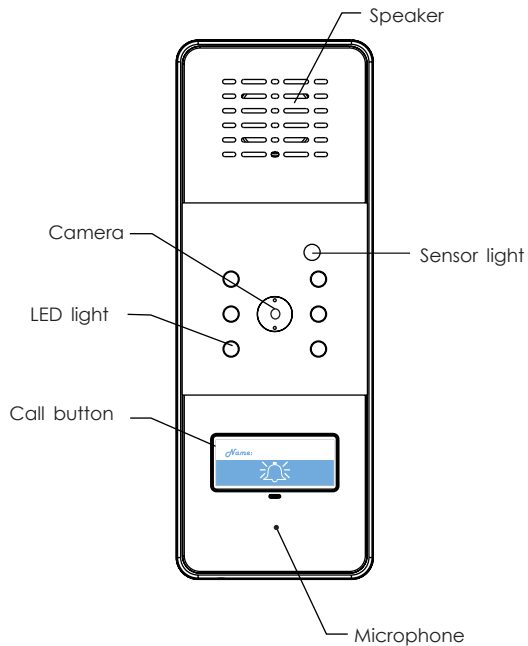

## ■ Indoor Phone Keys Description

### Handset



If someone visits, press to unlock the door.



Press to end the call.



Press to answer the call.

### Base



Press and hold to power the base on/off.  
When indoor phone rings, press to reject the call.



Press to enter the menu mode, press again to enter the Quad view.  
In menu mode, press to return to the previous menu or exit.  
If someone visits, press to unlock the door.



In menu mode, press to confirm/change the current operation.  
In image mode, press to switch the camera mode (Scan between cameras, Quad view, Full view).  
If someone visits, press to answer/end the call.

## Navigation key



### **Up/Video/Photo key**

In menu mode, scroll up through lists and menu options.  
In image mode,  
press to take photos;  
press and hold to record video, press again to stop.



### **Down/CH key**

In menu mode, scroll down through lists and menu options.  
In image mode, press to switch the 1#~4# Camera.



### **Left/Vol- key**

In menu mode, cycle through lists and menu options.  
In image mode, press to decrease the volume.




### **Right/Vol+ key**


In menu mode, cycle through lists and menu options.  
In image mode, press to increase the volume.

# Installation Instruction

## ■ Attaching the Camera

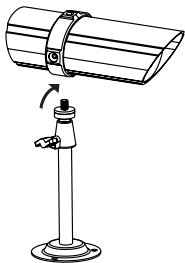


1. For each camera, attach the camera bracket to the mounting screw. You can attach the stand to the top or the bottom of the camera as needed. Tighten it a few turns, then turn the camera to face the direction you want.

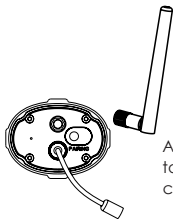

Attach the antenna to the rear of the camera.

② Tighten the brace against the camera to secure it in place.

④ Adjust the post to the correct angle, then tighten the wingnut to lock the post into place.

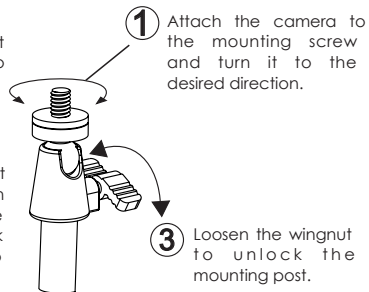

① Attach the camera to the mounting screw and turn it to the desired direction.

③ Loosen the wingnut to unlock the mounting post.

### Notes :


- The clearest line-of-sight between the camera and Outdoor phone is best.
- Optimized motion detection range is 6-18 feet for the camera.
- Rainfall, pool water ripples/reflections, tree/shrub leaves blowing in the wind - and the shadows they create - can generate motion detection false alarms.

## Installation Instruction

### ■ Installing the Indoor phone


Away from electrical appliances, such as a TV, personal computer or another cordless phone.

In a HIGH and CENTRAL location with no obstructions such as walls, microwave oven and WIFI.

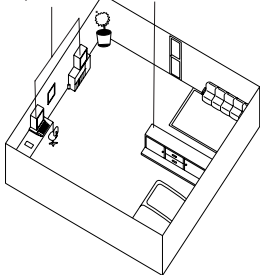

### ■ Installing the Outdoor phone

1. Choose a proper location for the outdoor phone. Be sure to consider the average height of visitors.
2. Align the rain cover and screws with the holes in the wall.
3. Install the outdoor phone into the rain cover. Please refer to the picture 3 below .
4. Drill a screw to fix and finish the installation.


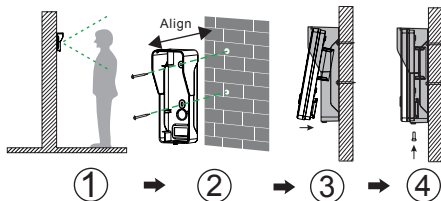


## ■ Installing Batteries

### Indoor phone

The rechargeable Ni-MH batteries (AAA size, 1.2V, 600mAh) come with your phone. Install the batteries before use.

1. Slide the battery cover in the direction of the arrow and pull it out.
2. Insert new batteries as indicated, matching correct polarity (+,-).
3. To replace the battery cover, slide the cover up until it snaps in place.

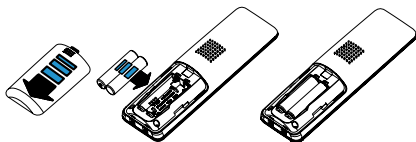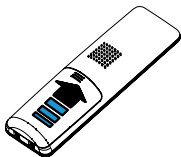

#### Note :

- Reversing the orientation may damage the handset.


#### Notes :

- The batteries need to be replaced if they do not recover their full storage capacities after recharging.
- When replacing the batteries, always use good quality Ni-MH re-chargeable batteries. Never use other batteries or conventional alkaline batteries.

## ■ Connecting the Power

### Connect the indoor phone

1. Connect the modular end of the AC power adapter to the power jack of the base, then plug the AC adapters into a standard AC wall outlet.
2. Connect one end of the phone line cord to the phone line jack of the base, and the other end to a standard phone wall outlet.

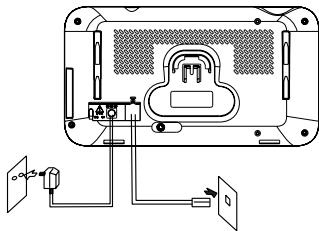

To AC wall outlet


To phone wall outlet

## ■ Charging Handset

**! Important Note:** Before initial operation, **YOU SHOULD FULLY CHARGE THE HANDSET** for about **15 hours**.

To charge the handset, you should place it on the base.

Result: When you place the handset on the base, the handset automatically turns on.

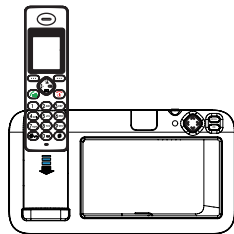


## Connect the camera

1. Connect one end of an AC adapter to the camera's power pigtail, then plug the AC adapters into a standard AC wall outlet.

## ■ Installing Batteries (continued)


### Outdoor phone

1. Install two C size batterie LR 14 1,5V (not supplied) into the battery compartment.
2. Drill four screws to fix the battery cover up.

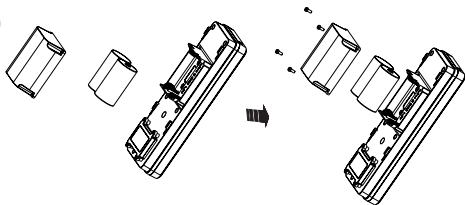



## Connect the outdoor phone Connection Mode 1

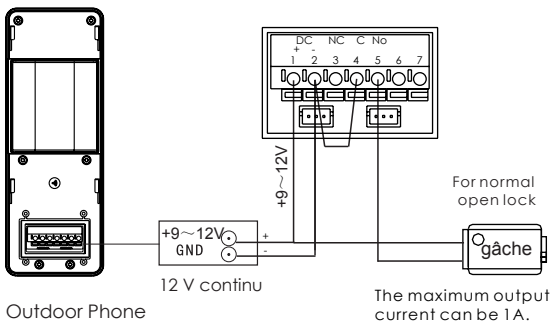




### Note :

- The two supply, batteries or AC modes, may be used simultaneously. To activate special functions, such as monitoring, backlight on the call button and unlocking, connect a power transformer available on scs shop. ([scs-laboutique.com](http://scs-laboutique.com))

## ■ Checking the Video Signal





The Indoor phone will show the video on the screen. The icons at the top of the screen tell you what's going on with the camera and Indoor phone.

The table below shows the different status icons and what they mean. Since the icons appear based on the state of the camera and Indoor phone, you won't see all of these icons at the same time.


Icon	What it Means
	The signal from the camera is from low to strong.
	There is no signal from the camera.
	The video currently on the LCD comes from the camera 1#, 2#, 3#, 4#.

## Operations

### ■ Registering the Outdoor phone



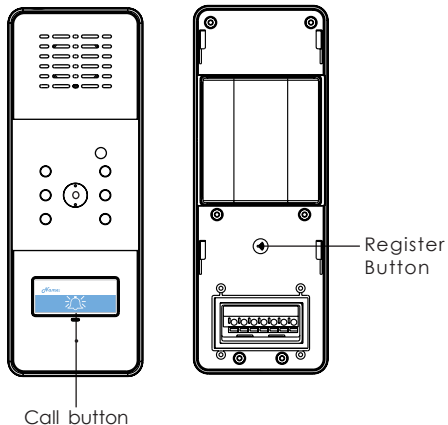

1. Press  on the base, then select the **Camera List** menu. Then press  or  key to select from 1#,2#,3#,4#, press  key.
2. Press the **Call** button of the Outdoor phone , then hold the **Register** key on the back of the Outdoor phone until the LED light blinks. Once the screen displays the device name, the Outdoor phone has been registered to the Indoor phone successfully.

If the screen displays **Time out**, the registration was unsuccessful, you must register again.




## Operations

### ■ Registering the Camera

1. Press  on the base, then select the **Camera List** menu. Then press  or  key to select from 1#,2#,3#,4#, press  key.
2. Press and hold the **Pairing** button 3s on the back of the camera. Once the screen displays the device name the camera has been registered to the Indoor phone successfully.

If the screen displays **Time out**, the registration was unsuccessful, you must register again.

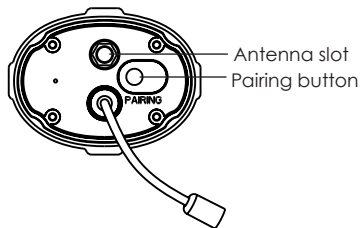

## Operations






### ■ Turning On/Off

To turn the handset on/off, press and hold .

To turn the base on/off, press and hold .

### ■ Calling Indoor phone

In standby mode, press the **Call** button on the Outdoor phone. The indoor phone rings, and the image of the visitor appears on the screen and the "CALL" will be displayed on the upper left of the screen.

1. If the master does not want to answer, press  key to cancel the ringer.
2. After the master press  key on the base or  key on the handset, the indoor phone will stop ringing. Then the conversation starts.
3. Press  key on the base or  key on the handset or to end the conversation.

#### Note :

- The conversation can be up to 2 minutes. After 2 minutes, the line will be disconnected automatically.

## Operations(Continued)

### ■ Unlocking

To unlock the door, press  key on the base or  key on the handset .

### ■ Light Sensor

When someone presses the **Call** button on the Outdoor phone, all the LED lights will light on if the ambient environment gets too dim.


All the LED lights on the camera automatically turns on when the ambient environment gets too dim.

### ■ Power Indicator

When the camera is power on, the power indicator will turn on.

### ■ Taking Photos and Recording

press  key to take photos;

press and hold  key to record video, press  key again to stop.

#### **Note :**

- To take photos or record, please insert the SD microcard.
- You can record from all cameras at the same time.

## Operations(Continued)

### ■ Switching the Camera Mode

Press **OK** key to select how you want the Live screen to display camera input:

Scan between cameras

Quad view(camera 1#~4# display)



Full view(1 camera display on full screen).

Press **MENU** key to exit the camera mode.



#### Note :

- During the monitor, You can use **◀** key or **▶** key to monitor and adjust the volume .



## Screen Description

In standby mode, press  to select the menu, then press  key to enter.



Main Screen	Sub Screen	What it Does
	Video Playback	Playback the videos.
	Photo Playback	Playback the photos.
	Cyclic Recorder	Records cyclically. You can set it On or Off.
	Motion Detect Sensitivity	Records when something moves in front of the camera.
	Monitor Recorder Mode	You can select the monitor recorder mode.
	Doorbell Auto. Recorder	The doorbell can automatically record by your setting.
	Doorbell Snapshot Mode	Allow you select the doorbell snapshot mode.




Main Screen	Sub Screen	What it Does
	Brightness Set.	Adjust the Brightness of the indoor phone display.
	Volume Set.	Set the volume of the indoor phone.
	Time Set.	Set the current time.
	Auto. Switch Time	Select the auto switch time of the image scan mode .
	SD Information	Display the micro SD information.
	Camera List	Select and register the camera that you like.
	Default Settings	Set the default settings On or Off.
	Format micro SD	Formats/erases all the data on the micro SD card.
	Software Version	Display the software version.

## Mode Description(Continued)



 
### ■ The Menu Mode



In image mode, press  key to enter the menu.

In menu mode, press  key to back to the previous menu.


In the previous menu, press  key to select different menu.

Press  key to enter the next menu.





Press  or  key to select different option, press  key to confirm.

Press  or  key to change the parameter of the option, There will be left and right arrows to indicate.

### ■ The Camera Mode

Press  key to switch camera mode(Full view, Quad view, Scan between cameras).

#### ● Full view/Quad view

-  Decrease the volume.
-  Increase the volume.
-  Press to take photos;  
Press and hold to record video,  
press again to stop.
-  Switch the1#~4#Camera.

#### ● Scan between cameras













Mute the volume.

Can't take photos and recorder.

## Mode Description(Continued)













### ■ The Motion Detection Recorder Mode

With the **Monitor Recorder Mode On** , the Indoor phone will records when something moves in front of the camera.

1. Press  key to display the main menu items.
2. Press  to choose  then press  key.
3. Press  or  key to choose **Motion Detect Sensitivity** , press  key.
4. Press  or  key to choose 1#,2#,3#,4#. You can press  or  to set the motion detect sensitivity level to Off, Low, Middle, High.
5. Press  key to save the settings.

## Menu Description

### ■ Time












 
1. Press  key to display the main menu items.
2. Press  to choose  then press  key.
3. Press  or  key to choose **Time Set.** , press  key.
4. Press  or  key to choose Year, Month, Day, Hour, Minute. You can press  or  key to adjust.
5. Press  key to save the settings.

#### Note :

- The Time and Date must be set beforehand to ensure that the time displayed on the monitoring photos are correct.
- When you replace batteries, you must set the time and date again.



 



 


### ■ Volume

This function allows you to adjust the volume (5 levels are adjustable) during a call.










1. Press  key to display the main menu items.
2. Press  to choose  , then press  key.
3. Press  or  key to choose **Volume Set.** , press  key
4. Press  or  key to select the volume that you like. Each time you press  or  key , the indoor phone sounds with the selected volume.
5. Press  key to save the setting.

## Menu Description(Continued)

### ■ Video Playback

1. Press  key to display the main menu items.
2. Press  to choose  , then press  key.
3. Press  or  key to choose Video Playback? press  key.
4. Press  or  key to choose the recording you want to view. It displays on the screen.

### ■ Photo Playback








1. Press  key to display the main menu items.
2. Press  to choose  , then press  key.
3. Press  or  key to choose Video Playback? press  key.
4. Press  or  key to choose the photo you want to view. It displays on the screen.

#### Note :











- Only reset the indoor phone to the factory default or format the micro SD card allows you delete photos and videos.

## Menu Description(Continued)

### ■ Cyclic Recorder








1. Press  key to display the main menu items.
2. Press  to choose , then press  key.
3. Press  key to choose **Cyclic Recorder** . Then press  or  key to select **No** or **Yes** to activate or deactivate the feature.

### ■ Monitor Recorder Mode

1. Press  key to display the main menu items.
2. Press  key to choose , then press  key.
3. Press  or  to choose **Monitor Recorder Mode** , press  key.
4. Press  or  to choose the monitor recorder mode that you like. You can choose from No, 10 Sec. Video, 30 Sec. Video, 60 Sec. Video.
5. Press  key to save the setting.

## Menu Description(Continued)






 
### ■ Doorbell Auto. Recorder

1. Press  key to display the main menu items.
2. Press  to choose  then press  key.
3. Press  or  key to choose **Doorbell Auto. Recorder**, press  key.

### ■ Doorbell Snapshot Mode

When visitors press the **Call** button on the Outdoor phone, the Indoor phone will take photos automatically. This function allows you set the doorbell snapshot mode.




 








1. Press  key to display the main menu items.
2. Press  to choose , then press  key.

3. Press  or  key to choose **Doorbell Snapshot Mode**, press  key.
4. Press  or  key to choose the doorbell snapshot mode that you like. You can choose from 1 photo, 3 photos, 5 photos.
5. Press  key to save the setting.

## Menu Description(Continued)











### Brightness

This function allows you to adjust the light level (5 levels are adjustable).

1. Press  key to display the main menu items.
2. Press  to choose , then press  key.
3. Press  or  key to choose **Brightness Set.**, press  key.
4. Press  or  key to select the light level that you like. Each time you press  or  key, the indoor phone displays with the selected light level.
5. Press  key to save the setting.

### Auto Switch Time




 



You can have the Indoor phone automatically cycle through the camera 1#~4#. This function allows you to select the amount of time you want the Indoor phone to stay on each camera.

1. Press  key to display the main menu items.
2. Press  to choose , then press  key.
3. Press  or  key to choose **Auto Switch Time**, press  key.
4. Press  or  key to choose the auto switch time that you like. You can choose from 5 seconds, 10 seconds, 30 seconds, 60 seconds.
5. Press  key to save the setting.












## Menu Description(Continued)

### ■ SD Information

1. Press  key to display the main menu items.
2. Press  to choose , then press  key.
3. Press  or  key to choose **SD Information**, press  key. Then you can view the SD information.

### ■ Default Settings

This function allows you to reset the indoor phone settings to the factory default.

1. Press  key to display the main menu items.
2. Press  to choose , then press  key.
3. Press  or  key to choose **Default settings**, press  key. Then press  or  key to select No or Yes to activate or deactivate the feature.

#### Note :




 






- If you reset the indoor phone to the factory default, all of the settings will return to the factory default.

## Menu Description(Continued)
  
### Format micro SD

This function allows you to format the micro SD.








Formatting any micro SD card deletes all file on that card.

1. Press  key to display the main menu items.
2. Press  to choose , then press  key.
3. Press  or  key to choose **Format SD**, press  key. Then press  or  key to select No or Yes to activate or deactivate the feature.
4. Press  key to save the setting.

#### Note :

- The Indoor phone supports up to a 32 GB SD Card.

### Software Version

1. Press  key to display the main menu items.
2. Press  to choose , then press  key.
3. Press  or  key to choose Software Version, press  key. Then you can view the software version.

# Menu Map

## 1. Playback

- Video Playback
- Phone Playback

## 2. Recorder

- Cyclic Recorder
- Motion Detect Sensitivity
- Monitor Recorder Mode
- Doorbell Auto. Recorder
- Doorbell Snapshot Mode

## 3. Display

- Brightness Set.
- Volume Set.
- Time Set.
- Auto Switch Time

## 4. System

- SD Information
- Camera List
- Default Settings
- Format SD
- Software Version

## Technical Specifications

Platine extérieure			
Transmit Frequency Range	2.400GHz~2.4835GHz	White Balance	Auto
Transmitting Distance	Outdoor:200m, Indoor:50m	Lens	4.9mm / F2.8
Image Sensor Type	1/4 Color CMOS Image Sensor	Viewing Angle (Diagonal)	50
Power Consumption	500mA Max (cells), 400mA Max (+12V DC)	Minimum Illumination	1 LUX (without LED illumination)
Operating Temperature	-30℃ ~40℃	LED	6 LEDs
Size(WXHXD)	185x68x50mm	Power Requirement	+9~12V DC +-5%/2 LR14(C), 1.5V batteries

Indoor phone Base	
Receiving Frequency Range	2.400GH~2.4835GHz
Monitor	7" TFT LCD
Resolution	800 480(RGB)
Alimentation	+5V DC
Power Requirement	450mA Max
Operating Temperature	-10°C~40°C
Size(WXHXD)	255x140x52mm
No. of outdoor phones or cameras supported	Max.4


Camera			
Transmit Frequency Range	2.400GH~2.4835GHz	Minimum Illumination	1 LUX (without LED illumination)
Transmitting Distance	Outdoor:200m, Indoor:50m	LED	16 IR LEDs
Image Sensor Type	1/4" Color CMOS Image Sensor	Power Requirement	+12V DC
White Balance	Auto	Power Consumption	450mA, +12V DC
Lens	3.6mm / F2.4	Operating Temperature	-15°C~40°C
Viewing Angle (Diagonal)	65	Size(WXHXD)	147x71x54mm

✎ Design and specifications are subject to change without notice.

# Part2: Dect Phone

## Phone Layout and Keys Function

### Handset

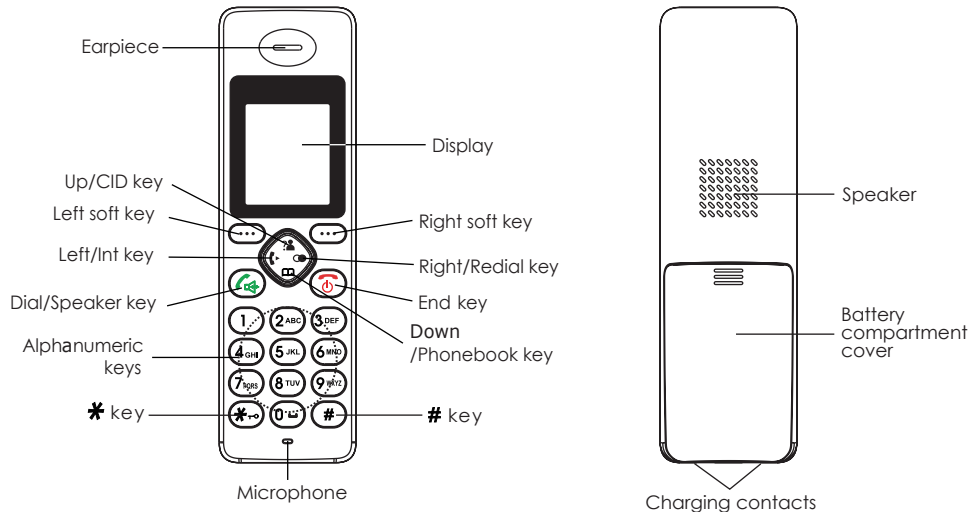





## Phone Layout and Keys Function (continued)

### Base

#### Front view

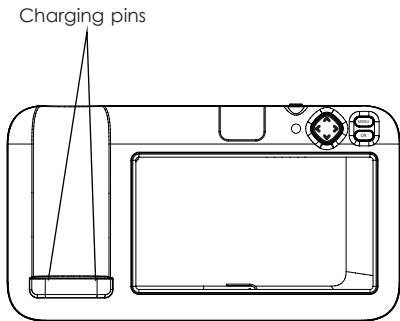

#### Rear view

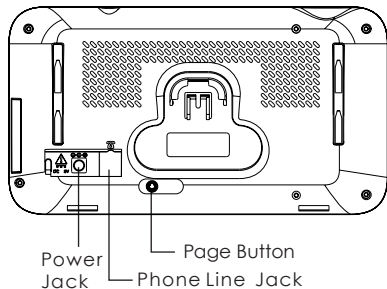

## ■ Keys Description



### **Dial/Speaker key**

Make/Answer a call.

Activates the speakerphone if pressed during a call, as described in page 24.

### **End key**

End a call.

Long press to activate power on/off, as described in page 11.

### **Navigation key:**



#### **Up/CID key**

Scroll up through lists and menu options.

Increase the earpiece/speakerphone volume during a call.

Enter the CID book, as described in page 18.



#### **Down/Phonebook key**

Scroll down through lists and menu options.

Decrease the earpiece/speakerphone volume during a call.

Enter the Phonebook, as described in page 28.




#### **Left/Int key**

Set up an internal call to another handset.

Transfer an incoming call to another handset.

Set up a conference call with an external line and an internal handset.

## ■ Keys Description (continued)

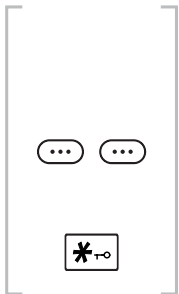

### **Right/Redial key**

Enter the redial book, as described in page 16.  
Insert a pause when pre-dialing a number.

### **Left/Right soft key**

Perform the functions indicated by the text immediately over it (on the bottom line of the display) which changes time by time.

### **\* key**

Press and hold to turn on/off keypad lock function.  
Set up a conference call, as described in page 38.

## LCD Window Icons Description



### New Call

Indicates you have missed one or more calls.



### MSG Waiting

Indicates you have one or more voice messages.



### Off Hook

Indicates the line is engaged.



### Hands-free

Indicates the handsfree function is enabled.



### Battery Icon

Indicates battery charge level.



### Signal Icon

Indicates whether the current signal exists or not. If the handset is too far from the base, this icon will blink on the LCD.



### Alarm Icon

This icon appears when you set an alarm to ring at a specified time.




### Keypad lock

This icon appears when the keypad is locked.

## ■ Connecting Lines

1. Connect the modular end of the AC power adapter to the power jack of the base, then plug the AC adapters into a standard AC wall outlet.
2. Connect one end of the phone line cord to the phone line jack of the base, and the other end to a standard phone wall outlet.

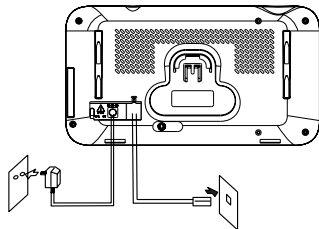


To AC wall  
outlet

To phone wall outlet

## ■ Installing Batteries

The rechargeable Ni-MH batteries (AAA size, 1.2V, 600mAh) come with your phone. Install the batteries before use.

1. **Slide the battery cover in the direction of the arrow and pull it out.**
2. **Insert new batteries as indicated, matching correct polarity (+, -).**

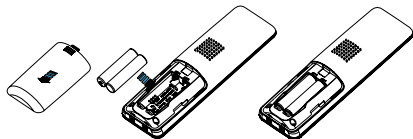


### Note :

- Reversing the orientation may damage the handset.

## ■ Installing Batteries (continued)

3. To replace the battery cover, slide the cover up until it snaps in place.

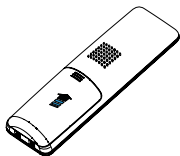

### Notes :


- The batteries need to be replaced if they do not recover their full storage capacities after recharging.
- When replacing the batteries, always use good quality Ni-MH re-chargeable batteries. Never use other batteries or conventional alkaline batteries.

## ■ Charging Handset

**! Important Note:** Before initial operation, **YOU SHOULD FULLY CHARGE THE HANDSET** for about **15** hours.


To charge the handset, you should place it on the base.


Result: When you place the handset on the base, the handset automatically turns on.

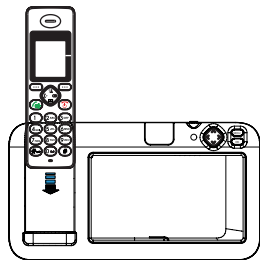

## ■ Turning Handset On/Off

When the handset is in power off mode and you place it on the base, it automatically turns on. To turn the handset on or off in standby mode, follow these steps:

 1. To turn the handset on, press and hold the  key until the display is switched on. While the handset searches for a base, the signal icon will flash and the following message will be displayed.




2. To turn off the handset, keep the  key pressed until the display disappears.


When the handset has found the base, it will enter the standby mode, the display will show handset number or the handset name (if you have one saved as described on page 22), signal icon, battery icon and current time. If the handset is unsuccessful in finding a base, the handset will behave according to the Out of Range condition.

### Note :

 - If the battery power is very low when you place the handset on the base, the following message will be displayed. **YOU SHOULD FULLY CHARGE THE HANDSET BEFORE USING.**

A screenshot of a handset display showing the text "Charging..." in the center.

## Basic Functions


All descriptions in this manual assume that the handset is in standby mode. Set the telephone to standby mode by pressing the  key.

### Making a Call

1. Pick up the handset and press the  key.

Result: The  icon appears on the LCD.


2. Dial a telephone number.

3. To end the call, either press the  key or replace the handset on the base.

#### Note :


- To make a call to the last number you dialed, use the **Redial** feature. For details, see page 16.

You can enter the desired phone number in standby mode, which allows you to make corrections before dialing. Follow these steps:

1. Enter a telephone number (up to 24 digits). Check it. You can also use the  key to insert a pause.

#### Note :


- If you make a mistake while entering a number, press the **Erase** soft key to clear the last digit.



2. When the number appears correctly, press the  key.



## ■ Receiving a Call







When a call is received, the **New Call** information will appear on the LCD.

If the caller can be identified, the caller's phone number is displayed. If the caller cannot be identified, only the **New Call** information displays. If you have a voice message, the  icon and "**MSG WTG ON** " will be shown on the LCD.

1. To answer the call, press the  key. If you have activated the Auto Answer function, when the handset is on the base, simply lift it up to answer.
2. To end the call, either press the  key or replace the handset on the base.

Result: After you hang up, the LCD displays the call duration.

### Notes :

- You can select the ringer volume by using the  or  key when the phone rings with an incoming call.
- If you want to deactivate the  icon, press the  key in standby mode, then press and hold the  key. After that, press the  key to return to standby mode. (The handset must be registered to the base.)
- If the polyphonic ring tone is set, the ring tone may continue for 4 seconds after the caller's hang-up or after the parallel phone had answered the call.

## ■ Muting the Microphone



During a conversation, you can temporarily switch your phone's microphone off, so that the other party cannot hear you.

**Example :** You want to say something to another person in the room but do not want the other party to hear you.

To mute your microphone, press the **Mute** soft key during the conversation. The "**Call Muted**" appears on the LCD.





 

To unmute the microphone, press the **Mute** soft key again. You will restore the normal condition.

## ■ Adjusting Voice Volume

During a conversation, you can use the  or  key to adjust the level of the earpiece (or the handsfree speakerphone one, if activated) volume from **Volume 1** to **Volume 5**. The selected volume will be displayed on the LCD.

## ■ Ringer Setting

You can select your own external (from the telephone Network) or internal (from other handsets registered to the same base) ring tone and adjust the volume.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings** menu, then press the **Select** soft key.
3. Press  or  key to choose **Ring Setup** , press the **Select** soft key.
4. Press the **Select** soft key to choose **INT Ring** or press the  key to choose **EXT Ring** , or press the  key to choose **Volume** , press the **Select** soft key.


Result: You can select the ring tone from Melody 1 to 10 or adjust the volume from Volume 1 to 5, or off. When you adjust the ring tone or volume, the phone plays the selected melody or sounds the selected loudness.

5. Press the **Select** soft key to confirm.

### Note :

- If you set the volume to "Off", when a call comes in, only the **New Call** information appears on the LCD.

## ■ Last Number Redial


 

1. Press the  key or the **Redial** soft key in standby mode.

**Result:** The LCD displays the last number you dialed.

2. Press the  key to dial out the number.

Your phone allows you to retrieve the last 10 numbers you have dialed and recall them quickly.

## Search for and dial a number in Redial Book



1. Press the **Redial** soft key in standby mode.
2. If you want to scroll through the memory, press  or  key repeatedly until you find out the number you want to dial.
3. Press the  key to dial out the number.

### Notes :


- If no numbers are found, "Empty" is displayed.
- When the redial book is full, each time you dial a new number, the oldest number stored in the redial book is automatically erased.

## Use Redial Book options

Using the redial book options, you can add a number to phone book or delete a number in the redial book.

1. Press the **Redial** soft key.
2. Scroll to the desired number by using the  or  key.
3. When the number appears on the display, press the **More** soft key to choose the desired option:



- **Add to PB:** allows you to add the number to the phone book. Complete storing the entry by starting from step 4 described in par. "Adding the Phone Book Entries" (obviously, you will find the number already entered in the appropriate field).
- **Delete:** allows you to delete the selected number.
- **Delete All:** allows you to delete the whole redial book.

4. To return to standby mode, press the  key.

**Note :**

- *At step 3, when you select **Delete All** options, a message "**Confirm**" will further ask you to confirm the deletion. To confirm press the **Select** soft key, to escape press the **Back** soft key.*

## CID Book





When you receive a call, if the caller's information is transmitted from the network on which the call was made (and the caller doesn't hide it), the caller's phone number is displayed. Moreover, if you missed one or more calls, the  icon will appear on the LCD. If the CID memory is full, the  icon will flash on the LCD.

**Out Of Area** - This message will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing number delivery to your area.



**Private** - If the caller has exercised the option to prevent his name and number from being sent, the message will show on the LCD.

### View and dial any of the CID numbers



1. Press the **Menu** soft key.

2. Use the **Select** soft key to choose the **CID Book**, and if available, the numbers are displayed. (You can also access the CID book directly by pressing the  key in standby mode.)
3. Use  or  key to view the numbers, you can make a call by a press of the  key. You can also add the entry to the phonebook.

#### Note :



- At step 3, each item of the incoming list is marked with the  icon if the call has been reviewed or with the  icon if the call hasn't been reviewed yet.



### Add CID Number to Phone Book

1. Press the **Menu** soft key.
2. Use the **Select** soft key to choose the **CID Book**.
3. Use  or  key to view the numbers, when the desired number displays on the LCD, press the **More** soft key to enter **Add to PB** menu.



4. Press the **Select** soft key, you are prompted to enter the name.
5. Enter the name and press the **Save** soft key, then you can modify the number you want to store.
6. Press the **Savesoft** key, you are able to select the ring tone from Melody 1 to Melody 10, press the **Select** soft key to confirm and exit, you will hear a confirm beep.

### Delete a number in the CID Book

1. Press the **Menu** soft key.
2. Use the **Select** soft key to choose the **CID Book** .
3. Scroll to the number you want to delete by using  or  key .
4. When the desired number appears on the display, press the **More** soft key.


5. Use  or  key to choose **Delete** , press the **Select** soft key. You will hear a beep and the LCD shows the next number.

 

### Delete all numbers in the CID Book



1. Press the **Menu** soft key.
2. Use the **Select** soft key to choose the **CID Book** .
3. Press the **More** soft key and use the  or  key to choose **Delete All** menu, then press the **Select** soft key.
4. The display shows "**Confirm**", press the **Select** soft key to confirm.

**Result:** You hear a beep and the phone returns to the standby mode after clearing all the CID numbers.

## ■ Key Lock

If you turn on this feature, all keys will be locked. You can answer calls by using the  key. But when you hang up, the phone returns to the locked mode. This feature is useful to avoid pressing keys by mistake.

  To lock the keys, in the standby mode just keep the  key pressed till the display shows "**HS Locked**", then the  icon appears.

To unlock the keys, keep the  key pressed again till the key lock icon  disappears from the display.


 
### **Note :**





- *In locked mode, if you press any key, the phone will generate a warning tone, and the " **HS Locked** " message will be redisplayed.*



## ■ Auto Answer



With this feature, you can answer a call by just picking up the handset from the base without pressing any key.





1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** key.

3. Use  or  key to choose **Auto Answer**, then press the **Select** soft key.
4. Use the  or  key to choose **On/Off** to enable/ disable the function, then press the **Select** soft key, you will hear a confirm beep.

## ■ Selecting a Language


 
The handset supports up to 11 predefined languages: English, German, French, Dutch, Swedish, Polish, Italian, Turkish, Spanish, Portuguese and Slovak. You can change the language used to display the menu messages.

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** softkey.

3. Use  or  key to choose **Language**, then press the **Select** soft key.
4. The languages will be displayed. Use the  or  key to scroll through the options. Each language will be displayed in its own native translation.
5. Press **Select** soft key to select the required language and you will hear a confirm beep.



## ■ HS Name








Using this feature, you can define a name of the handset in order to easily recognize your handset if you have more than one registered on the same base. To set the handset name:

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** soft key.

## ■ Range Alarm


A beep will sound during a call when the handset is out of range of the Base. You are able to select to enable/disable this audible warning.

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** soft key.

3. Use  or  key to choose **HS Name**, then press the **Select** soft key.
4. You can enter the handset name (up to 12 characters) by using the alphanumeric keys (use the **Erase** soft key to delete the incorrect characters), then press the **Save** soft key to confirm and exit. The handset name will be displayed above your handset number in standby mode.
3. Use  or  key to choose **Tone Setup**, then press the **Select** soft key.
4. Press the  key to choose **Range Alarm**, then press the **Select** soft key.
5. Use  or  key to choose **On/Off** to enable/disable this audible warning, then press the **Select** soft key, you will hear a confirm beep.


## Paging

You can page the handset from the base unit making it ring with a special tone. It's useful to locate a lost handset.

Press the  key on the base unit (less than 5 seconds), all the handsets registered to the base will ring for about 60 seconds.




To stop paging, press the  key on the base again or any key on the handset.



### Note:

- On a long  key press, more than or equal to 5 seconds, the base will enter subscription mode. For details, see page 36.

## Dial Mode

You can select to change the dial mode by the following steps:

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **BS Settings**, and press the **Select** soft key.
3. Press the  key to choose **Dial Mode**, then press the **Select** soft key.


 
4. You can press  or  key to select the required dial mode options ( **Tone/Pulse** ) and press the **Select** soft key. A confirm beep will be heard.

### Note:

- If you are not sure which dialing mode should be selected, please contact your local service provider.


 
## ■ Handsfree

During a call, you may turn on the speakerphone built in the handset. In this mode you can simply put your handset on a surface (e.g. a desk) and enjoy the comfort of the handsfree conversation.

To turn the feature on, press the  key during a call (line engaged). The  icon appears on the LCD.

## ■ Flash Signal

When the line is engaged, pressing the **Flash** soft key sends the Flash signal. This key is used in conjunction with special services (e.g. call waiting) which can be available in your phone network. For further details please contact your network telephone company.

To turn the feature off, and keep on talking in normal mode, press the  key again. The  icon will disappear.

### **Notes:**



- Before putting the handset near your ears, be sure you have turned the speakerphone off.
- To adjust the speakerphone volume, see page 49.

To use the said special services, just press the **Flash** soft key while the line is engaged: the display will show **R**.

## Advanced Functions


### ■ Menu Navigation

#### To access a menu option:

1. To display menu items, press the **Menu** soft key.
2. To scroll through menu options, press the  or  key repeatedly.
3. **To select a menu, press the Select soft key** when the desired menu appears on the LCD.
4. Repeat if necessary.


#### To return to standby mode:

**If you press the Back soft key from any menu,** the phone returns to the previous screen.

To return to standby mode, press the  key.

Also, the phone will automatically return to standby mode from any menu if no key is pressed in the next 40 seconds.

#### **Note :**

- In standby mode, you can press  key to switch the backlight on/off.

## Menu Map

### 1. CID Book (see page 18)

### 2. Phonebook

- New (see page 63)
- View (see page 64)
- Edit (see page 64)
- Delete (see page 65)
- Delete All (see page 65)
- PB Status (see page 65)

### 3. BS Settings

- Delete HS (see page 65)
- Dial Mode (see page 58)
- Flash Time (see page 59)
- Modify PIN (see page 66)

### 4. HS Settings

- Alarm (see page 67)
- Ring Setup (see page 50)
- Tone Setup (see page 57, 68)
- Language (see page 56)
- HS Name (see page 57)
- LCD Contrast (see page 69)
- Auto Answer (see page 56)
- Date & Time (see page 69)
- Selected BS (see page 70)

### 5. Registration (see page 70)

### 6. Default (see page 71)

## ■ Phone Book




The phonebook built in your cordless phone allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the phone number.

### Character Map

To enter a specific alphanumeric character, press one or more times the relevant key for the required character according to the following table: once for the first character, twice for the second and so on.

Key	Characters in the displayed order							
0	(spc)	0	?	&	/	.	,	!
1	1	_	+	-	"	(	)	%
2	A	B	C	a	b	c	2	
3	D	E	F	d	e	f	3	
4	G	H	I	g	h	i	4	
5	J	K	L	j	k	l	5	
6	M	N	O	m	n	o	6	
7	P	Q	R	S	p	q	r	s 7
8	T	U	V	t	u	v	8	
9	W	X	Y	Z	w	x	y	z 9


## Adding the Phone book Entries

1. Press the **Menu** soft key.
  2. Press the  key to choose **Phonebook**, press the **Select** soft key.
  3. Press the **Select** soft key to choose **New**.
  4. The display shows "**Name ?**". Enter the name you want to use, then press the **Save** soft key to confirm. The display shows "**Number ?**". Enter the desired number (up to 24 digits), press the **Save** soft key.
  - 5.\*Use  or  key to select the ring you like to associate with the number, press the **Select** soft key to confirm.
  6. Repeat if necessary.
- \* If you want to set a VIP number, you should select a special ring tone for it. The ring tone should be different from the external ring you have set. You can set up to 9 VIP ring tones associate with 9 VIP numbers/groups.




### Note:

- If you make a mistake while entering a name or a number, use the **Erase** soft key to correct it. Each time you press the key, the last character or digit is deleted.

## Using a Pause

A pause is useful when you access an interactive voice response system, such as an automated banking system. A pause provides a delay of 3 seconds. If you want to insert a pause when you dial a number in standby mode or store a number in memory, press the  key. The letter **P** will appear at the pause entry.

## Viewing the Phone book Entries

1. In the standby mode, press the  key.
2. Press  or  key repeatedly until the desired entry is displayed.







## Dialing a Number from Phone book



 



Find out the number you want to dial. Refer to "Viewing the Phone book Entries". Then press the

 key or **Dial** soft key.






## Viewing the detail of Phone book Entries

1. Press the **Menu** soft key.
2. Press the  key to choose the **Phonebook**, press the **Select** soft key.
3. Press  or  key repeatedly until the entry you want to view displays, press the **Select** soft key to confirm.
4. Press the  key to choose **View** menu. Press the **Select** soft key.

## Editing the Phone book Entries

1. Press the **Menu** soft key.
2. Press the  key to choose the **Phonebook**, press the **Select** soft key.
3. Press  or  key repeatedly until the entry you want to edit displays, press the **Select** soft key to confirm.
4. Press the  key to choose **Edit** menu. Press the **Select** soft key.
5. If necessary, press the **Erase** soft key to clear the digit(s) then enter the desired name and number, press the **Save** soft key to save.
6. Use  or  key to select the ring you like to associate with the number, press the **Save** soft key to confirm.

## Deleting the Phone book Entries

1. Press the **Menu** soft key.
2. Press the  key to choose the **Phonebook**, press the **Select** soft key.
3. Press  or  key repeatedly until the name you want to delete displays, then press the **Select** soft key.
4. Press  or  key to choose **Delete**. Press the **Select** soft key to delete it or press the **Back** key to exit.
5. At step 4, if you choose **Delete All** menu and press the **Select** soft key, the display will show "**Confirm**". You can press the **Select** soft key to delete all the entries or press the **Back** key to exit.





## PB Status

The PB Status shows the number of phone book entries already stored. When the **PB Status** shows on the LCD, press the **Select** soft key to enter it.

## ■ BS Settings






 
### Delete HS

This function allows you to delete a handset registration from the base.

1. Press the **Menu** soft key.
2. Press  or  key to choose **BS Settings**, then press the **Select** soft key
3. Press the **Select** soft key to choose the **Delete HS** menu. The display shows "**PIN?**" to prompt you to enter the PIN Code (The default PIN Code is "0000"). Then press the **Select** soft key.
4. Use  or  key to select a handset, press the **Select** soft key to confirm. Then the selected handset will behave according to the unregistered condition. If you select the current handset you are using or if you select a non-existent handset, a warning tone will be heard.





## Flash Time

You can select to change the Flash time by the following steps:

1. Press the **Menu** soft key.
2. Press  or  key to choose **BS Settings** , then press the **Select** soft key.
3. Use  or  key to choose **Flash Time** menu. Press the **Select** soft key.
4. The display shows the current setting. Use the  or  key to select **Flash-1 /Flash-2/Flash-3** , press the **Select** soft key.

## Modify PIN





This function allows you to change the PIN number of the currently active Base. The default PIN is 0000.



1. Press the **Menu** soft key.
2. Press  or  key to choose **BS Settings** , then press the **Select** soft key.
3. Use  or  key to choose **Modify PIN** menu, press the **Select** soft key.
4. The display shows "**PIN?**". Enter the current PIN, then press the **Select** key. If the old PIN code is correct, you will be prompted to enter a new PIN code, otherwise a warning beep will sound and the handset will return to the **Modify PIN** menu.
5. Enter the new PIN, press the **Select** key. You will be requested to confirm the PIN code. Enter the new PIN again then press the **Select** soft key to confirm and exit.

## ■ HS Settings


### Setting Alarm

You are able to set the alarm on the handset and adjust the alarm settings.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings** , then press the **Select** soft key
3. Press the **Select** soft key to choose **Alarm** menu.
4. The display shows the current set. Use the  or  key to select **On/Off** , press the **Select** soft key.
5. If you select **On** , the display indicates you to enter the time in **HH:MM** format. Use the numeric keypad to enter.







6. Press the **Select** soft key, a beep sounds and the display shows **Snooze On/Off**, you can press  or  key to enable or disable the snooze function on the alarm and press the **Select** soft key.
7. When the alarm sounds, press any key to stop the alarm sound.

#### Notes :

- At step 5 you need to enter the time in 24-Hour format.
- If you press any key at the right time the alarm to ring, the alarm will be silent.
- If you choose **Snooze On**, the alarm will ring at regular intervals of 11 minutes. If you press the  key when the alarm sounds, the option will be switched to **Snooze Off** .

## Key Tone

Every time you press a key, your handset acknowledges it with a key tone. You can disable the key tones for a silent use. In certain error conditions, a warning tone will sound when an incorrect key is pressed.








1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings** , then press the **Select** soft key
3. Press  or  key to choose **Tone Setup** menu, press the **Select** soft key.
4. Press the **Select** soft key again to choose **Key Tone** .
5. You can use  or  key to choose **On** or **Off** to enable or disable the function.
6. Press the **Select** soft key.

### Note:

- *For normal use, we recommend you leave the key tone enabled. This makes the phone easier to use.*



## LCD Contrast Setting







The adjustment allows you to optimize the visibility of the display by changing its contrast according to the environment conditions.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings** then press the **Select** soft key .
3. Press  or  key repeatedly to choose **LCD Contrast**, then press the **Select** soft key.
4. Use  or  key repeatedly to choose among the 17 available contrast levels, then press the **Save** soft key.
5. Press the  key to return to standby mode.


 
## Setting Date & Time

### 1. Date & Time Format

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings** , then press the **Select** soft key.

3. Press  or  key to choose **Date & Time** menu, press the **Select** soft key.
4. Use  or  key to choose **Date Format** or **Time Format**, press the **Select** soft key.
5. You can use  or  key to choose the Date Format ( **DD-MM-YY/ MM-DD-YY** ) or the Time Format ( **12-Hour/24-Hour** ), press the **Save** soft key to save.

### 2. Setting date & time







1. Perform steps 1 to 3 of previous paragraph.
2. Press  or  key to choose **Set Date** or **Set Time** menu, press the **Select** soft key.
3. Enter the current date/time by numeric keypad and press the **Save** soft key to save and exit.

#### Notes :

- If you select **12-Hour**, **AM/PM** will appear on the right of the time in standby mode.
- At step 3 you need to enter the time in **24-Hour** format.



## Selecting a Base

This function allows you to select a base from those already registered to the handset. You can access the options by scrolling the menu.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings** , then press the **Select** soft key.
3. Press  or  key to choose **Selected BS** menu, press the **Select** soft key.
4. You can use  or  key to select the base you want, then press the **Select** soft key. If you select a non-existent base, the handset will sound a warning tone.
5. The display will show **BS Selected** . Press the **Select** soft key to confirm. A confirm tone will be heard.

## ■ Default

If you reset the handset or the base, all of the user-selectable features will restore to the factory settings. It is useful for the following purposes:

- If you have made many wrong settings and you want to restore the handset to the factory presets.
  - If the phone shows logical malfunctions (incorrect symbols on the display or behavior etc.), the problem can be caused by a power supply noise or an electrostatic spike that can temporarily alter the memory of the internal microprocessor. Resetting could solve the problem.
1. Press the **Menu** soft key.
  2. Press  or  key repeatedly to choose the **Default**, then press the **Select** soft key.
  3. The display shows "**PIN?**". Enter the current PIN, then press the **Select** soft key. If the PIN code is correct, the display will show "**Confirm**". You can press the **Select** soft key to confirm or press the **Back** key to exit, otherwise a warning beep will sound and the handset will return to the **Default** menu.



## ■ Caller ID on call waiting

When you subscribe to Call Waiting service from your local telephone company, the telephone will display the name and number of the second caller while you are having a conversation.

### Caller ID info displayed

Caller 1  
4361234

### Caller two's information is displayed

Caller 1  
4  
Caller 2  
2915678

### Note :

- If you have transferred an external call to another handset, you cannot use the call waiting function via the second handset.

1. When you are on the line, the telephone will automatically display the name and number of the second caller.
2. Press the **Flash** soft key to answer the second caller.
3. When you have finished, press the **Flash** soft key to continue with your conversation with the first caller.

## Feature List

- 1.8GHz DECT technology
- 5 row dots matrix LCD display (128 x 64 dots matrix display)
- Up to 5 handsets for optional for one base
- Up to 4 bases for optional for one handset
- LCD contrast adjustable
- Phonebook with up to 50 entries
- 9 VIP ring tones setting for phonebook entries
- Redial book with up to 10 entries
- 10 melody ringer and volume selectable
- Key tone ON/OFF selectable
- Range alarm
- Full handsfree speakerphone
- Internal call
- Call transfer
- 3-way conference call
- Receiver/Speaker volume adjustable
- PIN protection
- Predialing
- Redial, Flash, Pause, Mute
- TONE/PULSE dialing mode selectable

- FLASH time selectable
- Call duration display
- Date & Time setting
- Keypad lock
- 11 languages selectable
- Auto answer ON/OFF selectable
- Alarm clock include snooze option
- Handset Name setting
- Backlit LCD screen and keypad
- Low radiation (optional)

### Caller ID

- FSK and DTMF dual system Caller ID
- Caller ID / Call Waiting
- Caller ID list with up to 40 entries
- Incoming calls can be called back/added to phonebook/deleted
- Message waiting

#### Note :

- *The caller ID feature is only available if you subscribe to a Caller Display service from your network provider.*

## Troubleshooting

Symptom	Check & Remedy
<b>No operation</b>	<ul style="list-style-type: none"> <li>• Check that the power adapter is properly connected.</li> <li>• Check that the telephone line cord is properly connected.</li> <li>• Check that the handset batteries in full power.</li> <li>• Check that the handset batteries are installed properly.</li> </ul>
<b>No dial tone</b>	<ul style="list-style-type: none"> <li>• Check that the telephone line cord is properly connected.</li> <li>• Check that the power adapter is properly connected.</li> </ul>
<b>Nothing appears on the display</b>	<ul style="list-style-type: none"> <li>• Check that the handset batteries are installed properly.</li> <li>• Check that the handset batteries in full power.</li> <li>• Check that the handset is on.</li> </ul>
<b>Handset seems to have very short battery life</b>	<ul style="list-style-type: none"> <li>• Check the charge contacts.</li> <li>• Consistently short battery life may indicate that replacement of the batteries is necessary.</li> <li>• Make sure the right batteries be used.</li> </ul>
<b>Caller's number is not displayed</b>	<ul style="list-style-type: none"> <li>• Make sure you have subscribed to a Caller ID service via your network provider.</li> <li>• The caller may have withheld their details.</li> <li>• Let the phone ring a couple of times as there may be a delay in receiving the Caller ID information.</li> </ul>

## Technical Specifications

Frequency Range	1.88~1.90GHz
Channels	120 Duplex channels
Carrier Power	<250mW
Modulation	GFSK
Frequency Stability	< 50 KHz
Charging time	15 hours
Ambient temperature	Normal: 15°C ~ 35°C, Extreme: 0°C ~ 40°C
Humidity	0%~90%
Dimensions (mm)	Base: 102 x 100 x 105; Handset: 160 x 48 x 28
Power Supply	Base input: 7.5V, 300mA; Handset input: Ni-MH: 1.2V x 2, 600mAh


 Design and specifications are subject to change without notice.



## If you subscribe to a DSL service

Please attach a noise filter (contact your DSL provider) to the telephone line between the base unit and the telephone line jack in the event of the following:

- Noise is heard during conversations.
- Caller ID features do not function properly.

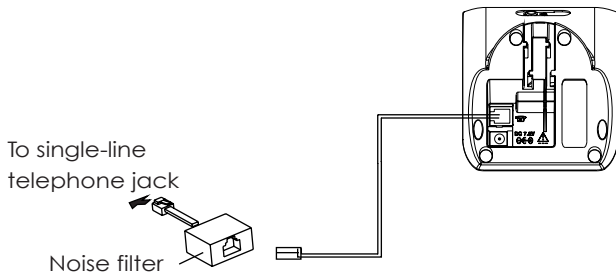



**Hotline assistance technique FR**  
au 0 892 350 490 (0.34 € TTC la minute)  
horaire hotline, voir sur le site internet

**[scs-laboutique.com](https://www.scs-laboutique.com)**